

AWK-3131A-RTG Series User Manual

Version 1.1, August 2025

www.moxa.com/products



© 2025 Moxa Inc. All rights reserved.

AWK-3131A-RTG Series User Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

Copyright Notice

© 2025 Moxa Inc. All rights reserved.

Trademarks

The MOXA logo is a registered trademark of Moxa Inc.
All other trademarks or registered marks in this manual belong to their respective manufacturers.

Disclaimer

- Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.
- Moxa provides this document as is, without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.
- Information provided in this manual is intended to be accurate and reliable. However, Moxa assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.
- This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

Technical Support Contact Information

www.moxa.com/support

Table of Contents

1. Introduction	5
Overview	5
Package Checklist	5
Product Features	6
Product Specifications	6
Functional Design	7
LAN Port.....	7
LED Indicators	7
Beeper.....	8
Reset Button.....	9
2. Getting Started	10
First-time Installation and Configuration	10
Communication Testing	12
Function Map	14
3. Web Console Configuration.....	15
Web Browser Configuration	15
Overview	16
Basic Settings	17
System Info Settings	17
Network Settings.....	18
Time Settings	20
Wireless Settings	21
Operation Mode.....	21
Basic Wireless Settings (Multiple SSID)	22
WLAN Security Settings.....	25
Advanced Wireless Settings	31
WLAN Certification Settings (Only For EAP-TLS in Client Mode)	36
WAC Settings (AP Mode Only).....	37
Advanced Settings	37
Using Virtual LAN	37
Configuring Virtual LAN	39
DHCP Server.....	40
Packet Filters	41
Static Route (For Client-Router Mode Only)	43
NAT Settings/Port Forwarding (For Client-Router Mode Only)	44
SNMP Agent.....	45
Mobile IP Settings	47
Link Fault Pass-Through (For Client Mode Only)	48
Auto Warning Settings.....	49
System Log	49
Syslog	50
E-mail.....	51
Traps	52
Status	53
Wireless Status	53
Associated Client List (For AP Mode Only).....	54
DHCP Client List	54
System Log	55
Relay Status	55
DI and Power Status.....	55
AeroLink Protection Status (For Client Mode Only)	56
Routing Table	56
LAN Status	56
Maintenance	56
Console Settings	57
Ping	57
Firmware Upgrade.....	57
Config Import/Export.....	58

Load Factory Default.....	60
Username/Password	60
Locate Device	61
Misc. Settings	61
Save Configuration	61
Restart.....	62
Logout.....	62
4. Software Installation and Configuration.....	63
Overview	63
Wireless Search Utility.....	63
Installing Wireless Search Utility	63
Configuring Wireless Search Utility	66
5. Using Other Consoles.....	72
USB Console Configuration (115200, None, 8, 1, VT100).....	72
Configuration via Telnet and SSH Consoles	74
Configuration by Web Browser with HTTPS/SSL.....	76
Disabling Telnet and Browser Access	76
A. References.....	77
Beacon	77
DTIM.....	77
Fragment.....	77
RTS Threshold	77
STP and RSTP	78
The STP/RSTP Concept	78
Differences Between RSTP and STP	78
B. Supporting Information	79
Firmware Recovery	79
DoC (Declaration of Conformity)	80
Federal Communication Commission Interference Statement	80
Canada, Industry Canada (IC) Notices	80
Antenna Gain and RF Radiated Power	81
RED Compliance Statement	82

1. Introduction

The AWK-3131A-RTG series wireless AP/client is the wireless solution for railway train-to-ground applications such as CCTV and CBTC communications. It can provide speeds of up to 300 Mbps with IEEE 802.11n technology. The AWK-3131A-RTG series can operate at temperatures ranging from -25 to 60°C for standard models and -40 to 75°C for extended temperature models, and is rugged enough for rolling stock environments. Installation is easy, with either DIN-rail mounting or distribution boxes, and the DIN-rail mounting capability, wide operating temperature range, and IP30 housing with LED indicators make the AWK-3131A-RTG a convenient yet reliable solution for any rolling stock application.

Overview

The AWK-3131A-RTG is 802.11n compliant to deliver speed, range, and reliability to support even the most bandwidth-intensive applications. The 802.11n standard incorporates multiple technologies, including MIMO (Multi-In, Multi-Out) Spatial Multiplexing, multiple channels (5, 10, 20 and 40 MHz), and dual bands (2.4 GHz and 5 GHz) to achieve high speeds, while still being able to communicate with legacy 802.11a/b/g devices.

The AWK-3131A-RTG is compliant with the EN 50155 standard that covers operating temperature range, power input voltage, surge, ESD, and vibration. The AWK-3131A-RTG can be easily mounted on to a wall, DIN rail or in distribution boxes. Its wide operating temperature range, IP68-rated housing with LED indicators, and the DIN-rail mounting capability make the AWK-3131A-RTG a convenient yet reliable solution for all types of industrial wireless applications.

Package Checklist

Moxa's AWK-3131A-RTG is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.

- 1 AWK-3131A-RTG
- 1 DIN-rail kit
- 2 plastic RJ45 protective cap: One for the console port and the other for use as a backup
- 1 plastic protective cap for fiber port (AWK-3131A-SSC-RTG only)
- Cable holder with one screw
- Quick installation guide (printed)
- Warranty card



NOTE

Antennas are not included and should be purchased separately. The AWK is certified with 2dBi omnidirectional antennas with QMA to RP-SMA adapters.

Product Features

- Designed specifically for the wireless communication requirements in train-to-ground communication (e.g.: CBTC and CCTV).
- 2x2 MIMO technology
- M12 anti-vibration connectors (AWK-3131A-M12-RTG)
- SC optical fiber connection (AWK-3131A-SSC-RTG)
- -40 to 75°C operating temperature range (T models)
- Certified against the EN 50121-4 railway standard
- Complies with all EN 50155 mandatory test items
- Controller-based Turbo Roaming (handover time < 50 ms @ 3 channels, WPA2) - available only when used with the WAC-1001 or WAC-2004
- Supports 5.8 GHz band in the standard model
- Supports QoS function, which can help assign high priority to your critical traffic
- Provides advanced wireless security settings
- Provides 64-bit and 128-bit WEP/WPA/WPA2 encryption
- SSID Hiding, IEEE 802.1X security, and RADIUS
- Packet access control and filtering
- Supports SNMP, SNTTP, SSH, HTTPS, TFTP for remote management
- Wall mountable
- Long-distance transmission support*

* *There are many factors that affect the performance of a device when it is used in long-distance applications. These factors include:*

1. Test architecture
2. Installation distance
3. Car speed
4. Antenna gain
5. Band
6. Transmission Power
7. Signal Strength
8. Channel interference

For details, please contact your Moxa sales representative.

Product Specifications



NOTE

The latest specifications for Moxa's products can be found at <https://www.moxa.com>.



ATTENTION

- The AWK-3131A-RTG is NOT a portable mobile device and should be located at least 20 cm away from the human body.
- The AWK-3131A-RTG is NOT designed for the general public. To establish a wireless network safely using the AWK-3131A-RTG, a well-trained technician should be consulted for installation.

Functional Design

LAN Port

The standard model of the AWK-3131A-RTG is provided with one M12 D code Megabit port. The LAN LED will light up when you insert the cable in the LAN port and a connection is established.

The standard model of AWK-3131A-SSC-RTG is provided with one SC fiber port. The 100M LED will light up when you insert the cable in the SC fiber port and a connection is established.



ATTENTION

Do not use a PoE (Power over Ethernet) Injector for the PoE device(s). Instead, use an IEEE 802.3af or IEEE 802.3at compliant PSE (Power Sourcing Equipment).

LED Indicators

The LEDs on the front panel provide a quick and easy means of determining the current operational status and wireless settings of the AWK-3131A-RTG.

The **FAULT** LED indicates system failures. If the AWK-3131A-RTG cannot retrieve the IP address from a DHCP server, the **FAULT** LED will blink at one-second intervals.



The following table summarizes how to read the device's wireless settings based on the LED displays. More information is available in Chapter 3 in the "Basic Wireless Settings" section.

LED	Color	State	Description
PWR1	Green	On	Power is being supplied from power input 1.
		Off	Power is not being supplied from power input 1.
PWR2	Green	On	Power is being supplied from power input 2.
		Off	Power is not being supplied from power input 2.
PoE (AWK-3131A-M12-RTG only)	Amber	On	Power is being supplied via PoE.
		Off	Power is not being supplied via PoE.
FAULT	Red	Blinking (slow at 1-second intervals)	Cannot get an IP address from the DHCP server
		Blinking (fast at 0.5-second intervals)	IP address conflict
		Off	No errors
STATE	Green/ Red	Green	System startup is complete and the system is in operation
		Green (blinking at 1-second intervals)	The AWK has been located by the Wireless Search Utility.
		Red	Boot up error
SIGNAL (5 LEDs)	Green	On	Signal level
		Off	(for Client and Client-Router mode only)
CLIENT MODE	Green	On	The AWK is functioning in Client or Client-Router Mode.
		Off	The AWK is not functioning in Client or Client-Router Mode.
WLAN	Amber	On	WLAN is in use.
		Off	WLAN is not in use.
LAN/100M*	Green	On	100 Mbps link is active .
		Blinking	Data is being transmitted at 100 Mbps.
		Off	100 Mbps link is inactive .



ATTENTION

When the system fails to boot, the LEDs for **STATE** (Green), **FAULT**, and **WLAN** will all light up simultaneously and blink at one-second intervals. This may be due to improper operation or issues such as an unexpected shutdown while updating the firmware. To recover the firmware, refer to the "Firmware Recovery" section in Appendix B Supporting Information.

Beeper

The beeper emits two short beeps when the system is ready.

Reset Button

The **Reset** button is located on the bottom panel of the AWK-3131A-RTG. You can reboot the AWK-3131A-RTG or reset it to factory default settings by pressing the **Reset** button with a pointed object such as an unfolded paper clip.

- **System reboot:** Hold the **Reset** button down for **under 5 seconds** and then release.
- **Reset to factory default:** Hold the **Reset** button down for **over 5 seconds** until the **STATE** LED starts blinking green light. Release the button to reset the AWK-3131A-RTG.



2. Getting Started

This chapter explains how to install Moxa's AirWorks AWK-3131A-RTG for the first time to quickly set up your wireless network and how to test whether the connection is working well. The function map provided in Chapter 3 is a convenient reference to the various functions available on the AWK-3131A-RTG and to determine the functions that you need to use.

First-time Installation and Configuration

Before installing the AWK-3131A-RTG, make sure that all items mentioned in the package checklist are in the box. You will also need access to a notebook computer or PC equipped with an Ethernet port. The AWK-3131A-RTG has a default IP address that you must use when connecting to the device for the first time.

Step 1: Select the power source.

The AWK-3131A-RTG can be powered by a DC power input or PoE (Power over Ethernet).

Step 2: Connect the AWK-3131A-RTG to a notebook or PC.

Since the AWK-3131A-RTG is provided with the MDI/MDI-X auto-sensing capability, you can use either a straight-through cable or crossover cable to connect it to a computer. When the connection between the AWK-3131A-RTG and the computer is established, the LED indicator on the AWK-3131A-RTG's LAN port lights up.

Step 3: Set up the computer's IP address.


Set an IP address for the computer so that it is on the same subnet as that of the AWK-3131A-RTG. Since the AWK-3131A-RTG's default IP address is **192.168.127.253**, and the subnet mask is **255.255.255.0**, set the IP address of the computer in the **192.168.127.xxx** IP range and subnet mask to **255.255.255.0**.

Step 4: Use the web-based manager to configure the AWK-3131A-RTG

Open your computer's web browser and type **http://192.168.127.253** in the address field to access the homepage of the web-based Network Manager. Before the homepage opens, you will need to enter the username and password as shown in the following figure. For first-time configuration, enter the following default username and password and click on the **Login** button:

Username: **admin**

Password: **moxa**

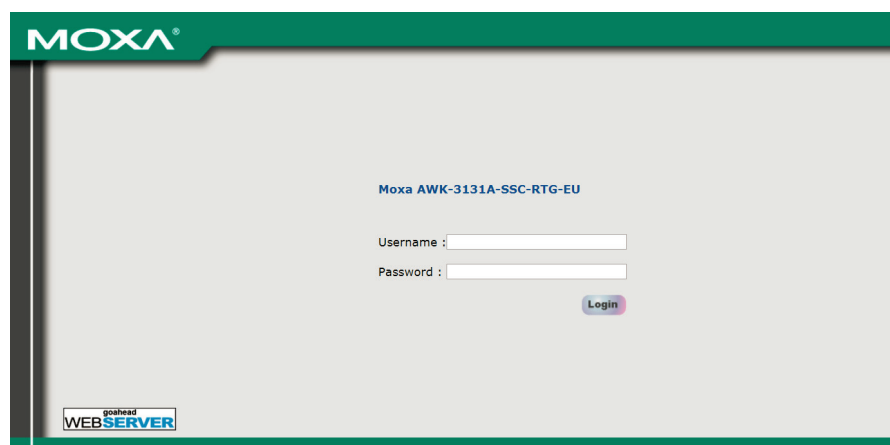

NOTE

Once successfully logged in using the default credentials, you will be prompted to update the password. To enhance security and allow configuration changes, we strongly recommend updating the default password.

You cannot change any configuration settings on the AWK-3131A-RTG when logged in with the default password.

"Please modify your password to meet password policy."

- Your password must follow the password policy.
- The minimum password length is 4 characters.

Old Password :


New Password :

Confirm New Password :




NOTE

If you logged in to the AWK via MXconfig (Java version) using the default credentials, you will be in read-only mode and cannot modify any settings. To modify the password and unlock all functions, navigate to the **Multiple Function Setting > Password Setting** page in MXconfig.

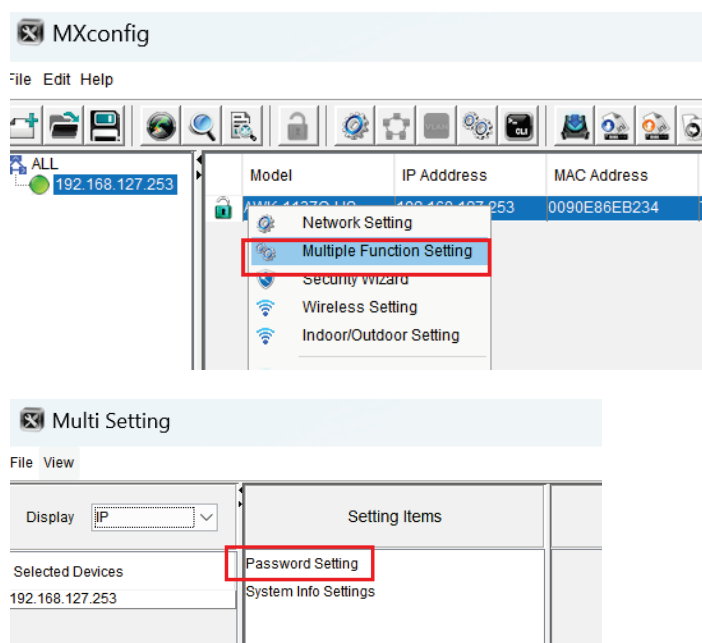

NOTE

After you click **Submit** to apply changes, the web page is refreshed and an **(Updated)** indicator is displayed next to the page heading along with a blinking reminder to restart the device.

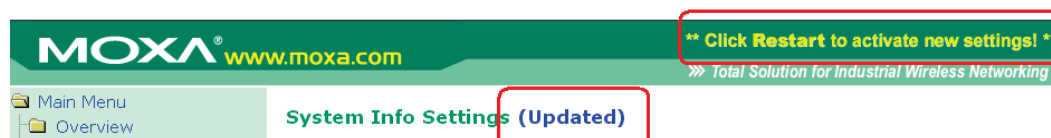

To activate the changes, click **Restart** and then click **Save and Restart** after you change the settings. The AWK-3131A-RTG will take about 30 seconds to complete the reboot process.

Step 5: Select the operation mode for the AWK-3131A-RTG.

By default, the operation mode of the AWK-3131A-RTG is set to **AP**. You can change this setting to **Client** mode at **Wireless Settings > WLAN > Basic Wireless Settings**. Detailed information about configuring the AWK-3131A-RTG is available in Chapter 3.

Step 6: Test the network connection.

In the following sections we describe two methods that you can use to test that a network connection has been established.

Communication Testing

After installing the AWK-3131A-RTG you can run a sample test to make sure the wireless connection on the AWK-3131A-RTG is functioning normally. Two testing methods are described below. Use the first method if you are using only one AWK-3131A-RTG device and the second method if you are using two or more AWK-3131A-RTG units.


How to Test One AWK-3131A-RTG

If you are only using one AWK-3131A-RTG, you will need one additional notebook computer equipped with a WLAN card. Configure the WLAN card to connect to the AWK-3131A-RTG (NOTE: the default SSID is **MOXA**), and change the IP address of the second notebook (Notebook B) so that it is on the same subnet as the first notebook (Notebook A), which is connected to the AWK-3131A-RTG.

After configuring the WLAN card, establish a wireless connection with the AWK-3131A-RTG and open a DOS window on Notebook B. At the prompt, type the following:


ping <IP address of notebook A>

and then press **Enter** (see the figure below). A "Reply from IP address ..." response means the communication was successful. A "Request timed out." response means the communication failed. In this case, recheck the configuration to make sure the connections are correct.

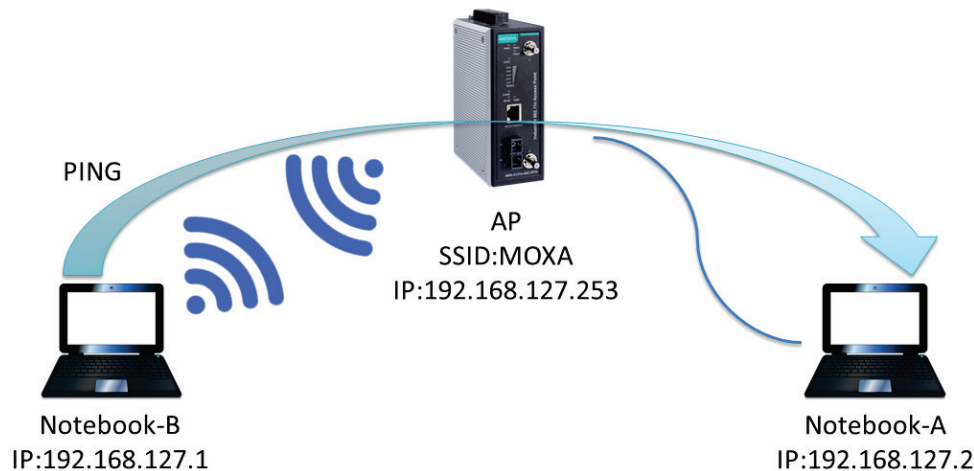

How to Test Two or More AWK-3131A-RTG Units

If you have two or more AWK-3131A-RTG units, you will need a second notebook computer (Notebook B) equipped with an Ethernet port. Use the default settings for the first AWK-3131A-RTG connected to notebook A and change the second or third AWK-3131A-RTG connected to notebook B to Client mode, and then configure the notebooks and AWK-3131A-RTG units properly.

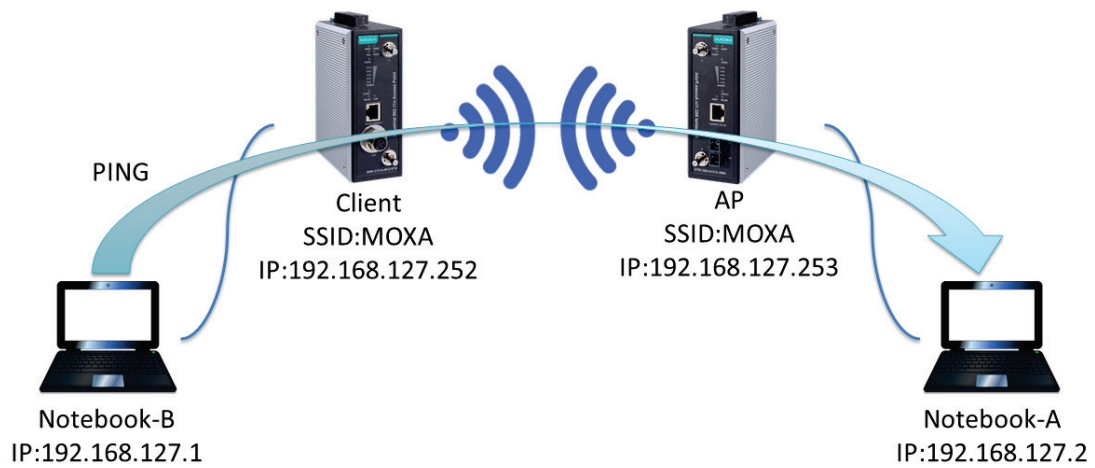


After setting up the testing environment, open a DOS window on notebook B. At the prompt type:

ping <IP address of notebook A>

and then press **Enter**. A "Reply from IP address ..." response means the communication was successful. A "Request timed out" response means the communication failed. In the latter case, recheck the configuration to make sure the settings are correct.

Function Map

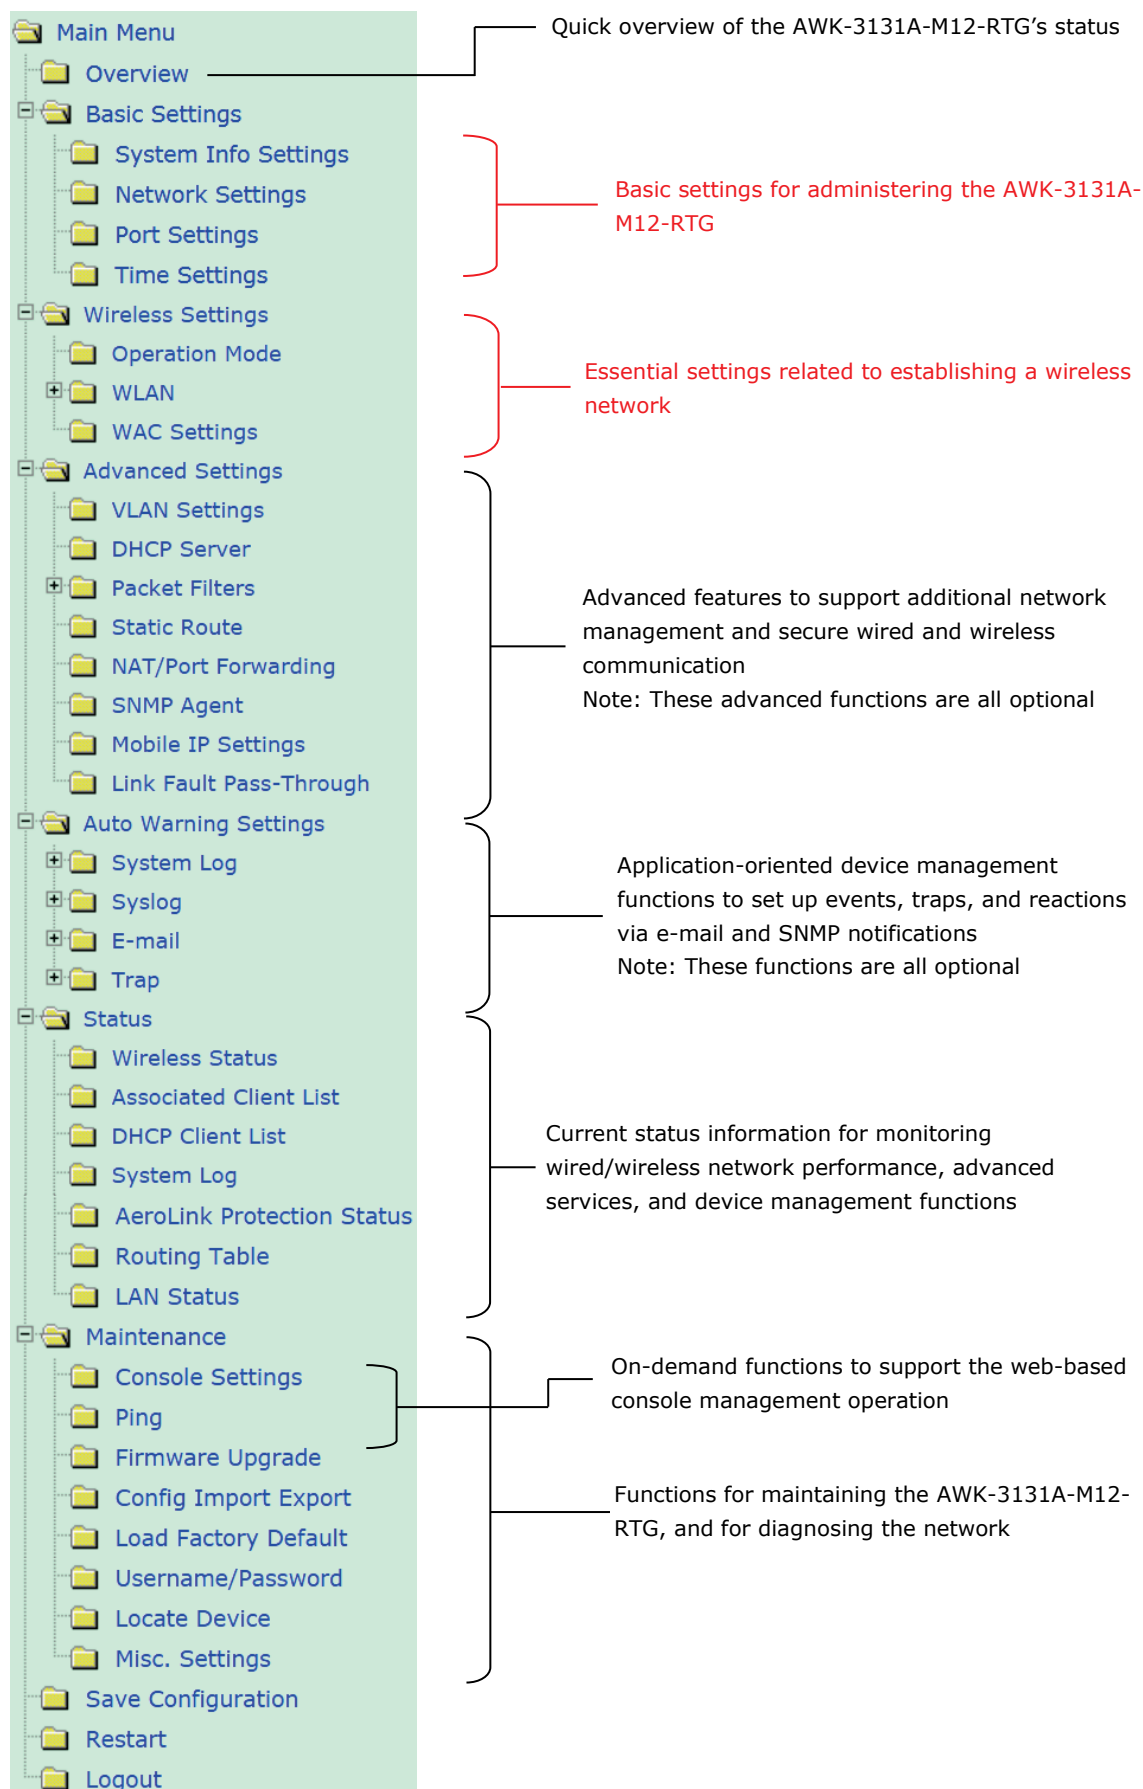

3. Web Console Configuration

In this chapter, we explain all aspects of web-based console configuration. Moxa's easy-to-use management functions help you set up your AWK-3131A-RTG and make it easy to establish and maintain your wireless network.

Web Browser Configuration

The web interface provides a convenient way to modify the configuration of the AWK-3131A-RTG and access its built-in monitoring and network administration functions. The recommended web browser is Microsoft® Internet Explorer 11.0 with JVM (Java Virtual Machine) installed.

 


NOTE


To use the management and monitoring functions of the AWK-3131A-RTG from a PC host connected to the same LAN as the AWK-3131A-RTG, you must make sure that the PC host and the AWK-3131A-RTG are on the same logical subnet. Similarly, if the AWK-3131A-RTG is configured on a different VLAN than the PC, you must make sure your PC host is on the management VLAN so that it can access the AWK-3131A-RTG. The default IP address of the AWK is **192.168.127.253**.

To access the web interface of the AWK-3131A-RTG, do the following:

1. Open a web browser (e.g., Internet Explorer), type in the default IP address of the AWK-3131A-RTG in the address field, and press **Enter**.

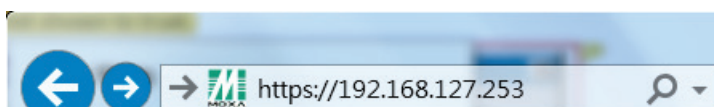

2. In the login page that is displayed, enter the **Username** and **Password** (default Username = **admin**; default Password = **moxa**) and click **Login** to continue.

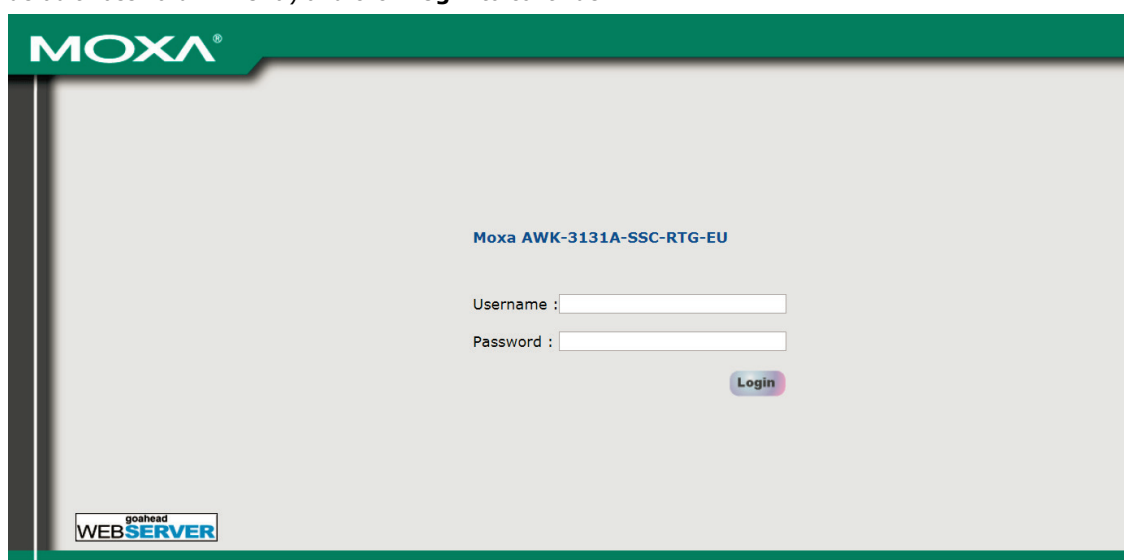

You may need to wait a few moments for the main page to download to your computer. Note that the model name and IP address of the AWK-3131A-RTG are both shown in the title bar of the web page. You can identify the web interfaces of multiple AWK-3131A-RTG units using this information.

- Use the menu tree on the left side of the window to open the configuration pages for the AWK-3131A-RTG's functions.

<ul style="list-style-type: none"> Main Menu Overview Basic Settings Wireless Settings Advanced Settings Auto Warning Settings Status Maintenance Save Configuration Restart Logout 	Overview	
	All information on this page are active values.	
	System Info	
	Model name	AWK-3131A-SSC-RTG-EU
	Device name	AWK-3131A-SSC-RTG_66:33:D5
	Serial No.	4995
	System up time	0 days 00h:15m:01s
	Firmware version	1.0 Build 18041815
	Device Info	
	Device MAC address	00:90:E8:66:33:D5
	IP address	192.168.127.253
	Subnet mask	255.255.255.0
	Gateway	
	802.11 Info	
	Country code	EU
	Operation mode	AP
	Channel	6
	RF type	B/G/N Mixed
	Channel width	20MHz
	SSID	MOXA

In the following paragraphs, we describe each AWK-3131A-RTG management function in detail. An overview of all the functions is available in the "Function Map" section of this manual.



NOTE

The model name of the AWK-3131A-RTG is shown as AWK-3131A-RTG-XX, where XX indicates the country code. The model name indicates the AWK-3131A-RTG version and the bandwidth it uses. We use **AWK-3131A-RTG-US** as an example in the following figures. (The country code and model name that appears on your computer screen may be different.)

Overview

The **Overview** page summarizes the AWK-3131A-RTG's current status. The information is categorized into the following groups: **System Info**, **Device Info**, and **802.11 Info**.

Overview	
All information on this page are active values.	
System Info	
Model name	AWK-3131A-SSC-RTG-EU
Device name	AWK-3131A-SSC-RTG_66:33:D5
Serial No.	4995
System up time	0 days 00h:15m:01s
Firmware version	1.0 Build 18041815
Device Info	
Device MAC address	00:90:E8:66:33:D5
IP address	192.168.127.253
Subnet mask	255.255.255.0
Gateway	
802.11 Info	
Country code	EU
Operation mode	AP
Channel	6
RF type	B/G/N Mixed
Channel width	20MHz
SSID	MOXA

Click on the **SSID (MOXA)**, in this case) to display detailed information on 802.11as shown below:

Wireless Status

☒ Auto refresh

Show status of WLAN (SSID: MOXA) ▼

802.11 Info

Operation mode	AP
Channel	6
RF type	B/G/N Mixed
Channel width	20MHz
SSID	MOXA
MAC	06:90:E8:66:33:D5
Security mode	OPEN
Current BSSID	06:90:E8:66:33:D5
Signal strength/Noise Floor	N/A/-95dBm
RSSI	0
Transmission rate	Auto
Maximum transmission power	12 dBm (-1 dBm/MHz)



NOTE

The **802.11 Info** that is displayed may differ based on the operation mode selected. For example, **Current BSSID** is not available in **Client** mode, and **Signal strength/Noise Floor** is not available in **AP** mode.

Basic Settings

The **Basic Settings** group includes the most commonly used settings required by administrators to maintain and control the AWK-3131A-RTG.

System Info Settings

The **System Info** related settings that you configure here, especially the **Device name** and **Device description**, are displayed on the **Overview** page. They are also included in the SNMP information and email alerts. Configuring the **System Info** settings for each AWK-3131A-RTG makes it easier to identify the different AWK-3131A-RTG units connected to your network.

System Info Settings

Device name	<input type="text" value="AP_011"/>
Device location	<input type="text" value="Area 32, 5th Floor"/>
Device description	<input type="text" value="No. 11 of ABC supporting system"/>
Device contact information	<input type="text" value="John Davis, sysop@abc.com"/>

Device name

Format	Description	Factory Default
Maximum of 31 characters	Specifies the role or application of this AWK-3131A-RTG unit.	AWK-3131A-RTG_<Serial No. of this AWK-3131A-RTG>

Device location

Format	Description	Factory Default
Maximum. of 31 characters	Specifies the location of this AWK-3131A-RTG unit.	None

Device description

Format	Description	Factory Default
Maximum of 31 characters	You can use this space to record a more detailed description of this AWK-3131A-RTG	None

Device contact information

Format	Description	Factory Default
Maximum of 31 characters	You can use this space to record the contact information of the person responsible for maintaining this AWK-3131A-RTG.	None

Network Settings

The **Network Settings** configuration panel allows you to modify the usual TCP/IP network parameters. However, due to the addition of the client-router operation mode, this panel provides two different sets of network parameters. Explanations for both types of configuration are given below.

Network Settings for AP/Client Operation Mode

Network Settings

Bridge

IP configuration

Static ▾

IP address

192.168.127.253

Subnet mask

255.255.255.0

Gateway

Primary DNS server

Secondary DNS server

Submit

IP address assignment

Setting	Description	Factory Default
DHCP	The AWK-3131A-RTG's IP address will be assigned automatically by the network's DHCP server	Static
Static	Set up the AWK-3131A-RTG's IP address manually.	

IP address

Setting	Description	Factory Default
AWK-3131A-RTG's IP address	Identifies the AWK-3131A-RTG on a TCP/IP network.	192.168.127.253

Subnet mask

Setting	Description	Factory Default
AWK-3131A-RTG's subnet mask	Identifies the type of network to which the AWK-3131A-RTG is connected (e.g., 255.255.0.0 for a Class B network, or 255.255.255.0 for a Class C network).	255.255.255.0

Gateway

Setting	Description	Factory Default
AWK-3131A-RTG's default gateway	The IP address of the router that connects the LAN to an outside network.	None

Primary/ Secondary DNS server

Setting	Description	Factory Default
IP address of the Primary/Secondary DNS server	The IP address of the DNS Server used by your network. After entering the DNS Server's IP address, you can input the AWK-3131A-RTG's URL (e.g., http://ap11.abc.com) in your browser's address field instead of entering the IP address. The Secondary DNS server will be used if the Primary DNS server fails to connect.	None

Network Settings for Client-Router Operation Mode

Network Settings

WLAN(Default Route)

IP configuration
Static ▼

IP address
192.168.128.253

Subnet mask
255.255.255.0

Gateway

Primary DNS server

Secondary DNS server

LAN

IP address
192.168.127.253

Subnet mask
255.255.255.0

Submit

WLAN IP address assignment

Setting	Description	Factory Default
DHCP	The AWK-3131A-RTG WLAN interface's IP address will be assigned automatically by the network's DHCP server	Static
Static	Set up the AWK-3131A-RTG WLAN interface's IP address manually.	

WLAN IP address

Setting	Description	Factory Default
AWK-3131A-RTG WLAN interface's IP address	Identifies the AWK-3131A-RTG WLAN interface's IP address on a TCP/IP network.	192.168. 128 .253

WLAN subnet mask

Setting	Description	Factory Default
AWK-3131A-RTG WLAN interface's subnet mask	Identifies the type of network to which the AWK-3131A-RTG's WLAN interface is connected (e.g., 255.255.0.0 for a Class B network, or 255.255.255.0 for a Class C network).	255.255.255.0

WLAN gateway

Setting	Description	Factory Default
AWK-3131A-RTG WLAN interface's default gateway	The IP address of the router that connects the WLAN to an outside network.	None

Primary/Secondary DNS server

Setting	Description	Factory Default
IP address of the Primary/Secondary DNS server	The IP address of the DNS Server used by your network. After entering the DNS Server's IP address, you can input the AWK-3131A-RTG's URL (e.g., http://ap11.abc.com) in your browser's address field instead of entering the IP address. The Secondary DNS server will be used if the Primary DNS server fails to connect.	None

LAN IP address

Setting	Description	Factory Default
AWK-3131A-RTG LAN interface's IP address	Identifies the AWK-3131A-RTG LAN interface's IP address on a TCP/IP network.	192.168. 127 .253

LAN subnet mask

Setting	Description	Factory Default
AWK-3131A-RTG LAN interface's subnet mask	Identifies the type of network to which the AWK-3131A-RTG's LAN interface is connected (e.g., 255.255.0.0 for a Class B network, or 255.255.255.0 for a Class C network).	255.255.255.0

Time Settings

The AWK-3131A-RTG has a time calibration function that can update the date and time information based on an NTP server or the date and time information specified by the user.

Time Settings

Current local time

Date (YYYY/MM/DD)

1999 / 11 / 30

Time (HH:MM:SS)

08 : 53 : 44

Set Time

Time protocol

Sntp ▾

Time zone

(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London ▾

Daylight saving time

☐ Enable

Time server 1

time.nist.gov

Time server 2

Query period

600 (600~9999 seconds)

Submit

The **Current local time** shows the AWK-3131A-RTG's system time when you open this web page. After you update the date and time setting, click on the **Set Time** button to activate the new date and time. An "(Updated)" string is displayed next to the date and time fields to indicate that the change is complete. Any change in the date and time setting is effective immediately and does not need a system restart.



NOTE

The AWK-3131A-RTG has a built-in real time clock (RTC). The RTC is a computer clock (most often in the form of an integrated circuit) that keeps track of the current time. We strongly recommend that users update the **Time Settings** of the AWK-3131A-RTG after the initial setup is complete or when the AWK-3131A-RTG is switched on after a long-term shutdown, especially if the network does not have an Internet connection for accessing a NTP server or there is no NTP server on the LAN.

Current local time

Setting	Description	Factory Default
User-specified date and time	The date and time parameters allow configuration of the local time with immediate activation. Use 24-hour format: yyyy/mm/dd hh:mm:ss	None

Time zone

Setting	Description	Factory Default
User-specified time zone	The time zone setting allows the conversion from GMT (Greenwich Mean Time) to the local time.	GMT



ATTENTION

Changing the time zone will automatically adjust the **Current local time**. You should configure the **Time zone** before setting the **Current local time**.

Daylight saving time

Setting	Description	Factory Default
Enable/ Disable	Daylight saving time (also known as DST or summer time) involves advancing clocks (usually 1 hour) during the summer time to provide an extra hour of daylight in the afternoon.	Disable

When **Daylight saving time** is enabled, the following parameters will be shown:

- **Starts at:** The date that daylight saving time begins.
- **Stops at:** The date that daylight saving time ends.
- **Time offset:** Indicates the number of hours the clock should be advanced.

Time server 1/2

Setting	Description	Factory Default
IP address of the name of the Time Server 1/2	IP address or domain name of the NTP time server. The second NTP server will be used if the first NTP server fails to connect.	time.nist.gov

Query period

Setting	Description	Factory Default
The query period to sync with the time server (1 to 9999 seconds)	This parameter determines how often the time is updated from the NTP server.	600 (seconds)

Wireless Settings


The essential settings for wireless networks are presented in the wireless settings function group. You must configure these settings correctly before you establish your wireless network. Familiarize yourself with the following terms before starting the configuration process:

AP: In a wireless local area network (WLAN), an access point is a station that transmits and receives data.

Client: When the AWK-3131A-RTG is configured for **Client** mode, it can be used as an Ethernet-to-wireless (or LAN-to-WLAN) network adapter. For example, a notebook computer equipped with an Ethernet adaptor but no wireless card can be connected to this device with an Ethernet cable to provide wireless connectivity to another AP.

Operation Mode

The AWK-3131A-RTG supports five main operation modes—**AP**, **Client**, and **Client-Router**, each of which plays a distinct role on the wireless network.

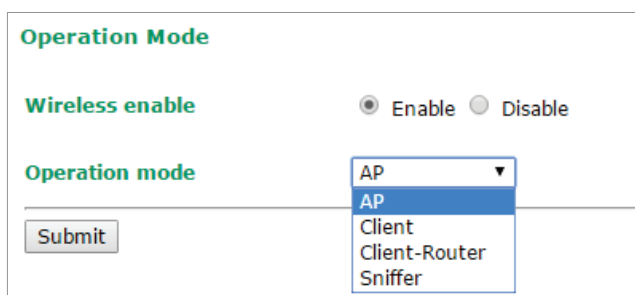

Wireless Enable


Setting	Description	Factory Default
Enable/Disable	Use this function to turn the RF (Radio Frequency) module on or off manually. NOTE: This function is available in AP operation mode only.	Enable

Operation Mode

Setting	Description	Factory Default
AP	The most common mode used by the AWK-3131A-RTG wherein it plays the role of a wireless AP	AP
Client	In this mode, the AWK-3131A-RTG can connect to wireless AP devices	
Client-Router	The AWK-3131A-RTG plays the role of a wireless client and a router.	
Sniffer	Turns the device into a remote Wireshark interface to capture 802.11 packets for analysis.	

Sniffer Mode Instructions:

1. Set operation mode to Sniffer mode on the AWK-3131A-RTG and then save/reboot the device.
2. Connect the AWK-3131A-RTG to a laptop with Wireshark installed (v1.12.0 or later release) via Ethernet.
3. Add a remote interface by entering the IP address of the AWK-3131A-RTG.

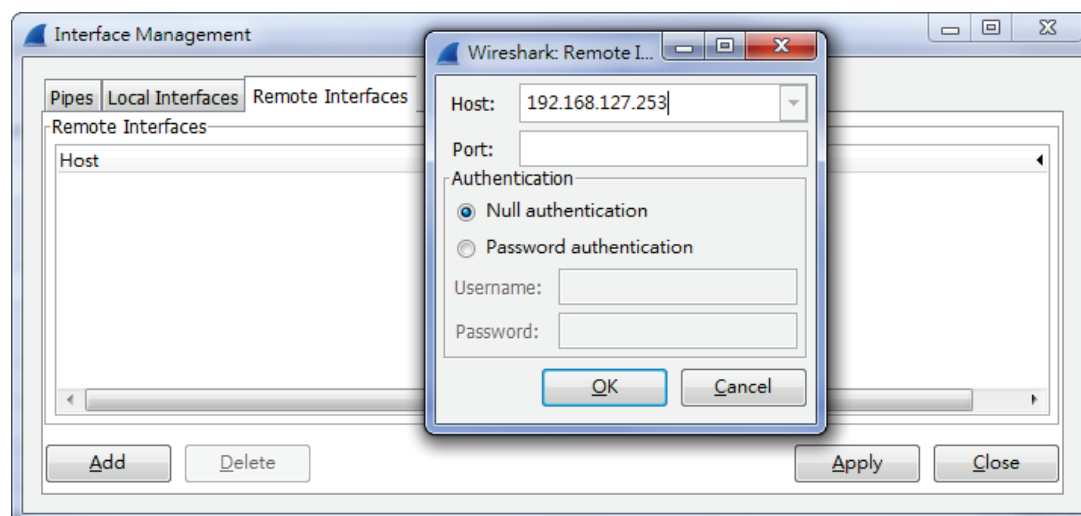

Detailed Wireshark instructions can be found at:

https://www.wireshark.org/docs/wsug_html_chunked/ChCapInterfaceRemoteSection.html

4. Start capturing 802.11 wireless packets with Wireshark.

Basic Wireless Settings (Multiple SSID)

You can add new SSIDs or edit existing ones in the **WLAN Basic Setting Selection** panel. You can configure up to 9 SSIDs for an AWK and configure each SSID differently.

An SSID is a unique identifier that wireless networking devices use to establish and maintain wireless connectivity. Multiple access points on a network or sub-network can use the same SSIDs. All of the SSIDs that you configure for an AP are active at the same time. That is, client devices can use any of the SSIDs to associate with the AP.

Basic Wireless Settings (Multiple SSID)			
Status	SSID	Operation Mode	Action
Active	MOXA	AP	Edit
Add SSID			

To create an SSID for your AWK, click on **Add SSID**. To edit an existing SSID and assign different configuration settings to it, click on the **Edit** button corresponding to the SSID. A configuration panel is displayed as follows:

Basic Wireless Settings

Operation mode

AP

RF type

B/G/N Mixed

Channel width

20 MHz

Channel

6

SSID

MOXA

SSID broadcast

☒ Enable
☐ Disable

50ms Turbo Roaming (controller-based)

☐ Enable
☒ Disable

Management frame encryption

☐ Enable
☒ Disable

Submit



NOTE

When you switch to Client mode, a Site Survey button will be available on the Basic Wireless Settings panel. Use the Site Survey function to view information about available APs, as shown in the following figures. You can also click on an SSID listed on the Site Survey page to bring the details of the SSID onto the Basic Wireless Settings page. To update the site survey table, click the Refresh button.

If this client is connecting to an AP, a brief disconnection will occur when you click on Site Survey.

Basic Wireless Settings

Operation mode

Client

RF type

B/G/N Mixed

Channel width

20 MHz

SSID

MOXA

50ms Turbo Roaming (controller-based)

☐ Enable
☒ Disable

Management frame encryption

☐ Enable
☒ Disable

Submit

Site Survey

http://192.168.127.253 - Site Survey - Microsoft Internet Explorer

Site Survey

No.	SSID	MAC address	Channel	Mode	Signal
1	Home	00-18-84-81-CD-9A	1	BSS/WEP	■■■■
2	FON_AP	00-18-84-81-CD-99	1	BSS/OPEN	■■■■
3	default	00-15-F2-A2-07-6A	1	BSS/OPEN	■■■■
4	BLW-54PM	00-90-CC-D6-B5-20	6	BSS/WEP	■■■■
5	BLW-54PM	00-90-CC-D6-BC-EC	6	BSS/OPEN	■■■■
6	ZyXEL	00-19-CB-41-48-9A	11	BSS/WEP	■■■■
7		00-16-01-8C-11-7F	11	BSS/OPEN	■■■■
8	HJ-Wireless	00-16-01-ED-D0-61	2	BSS/WEP	■■■■
9	default	00-40-05-56-9D-B1	8	BSS/WEP	■■■■
10	hpssetup	52-BC-90-E2-84-14	10	Ad Hoc/OPEN	■■■■

Refresh
Close

RF type

Setting	Description	Factory Default
2.4 GHz		
B	Only supports the IEEE 802.11b standard	B/G/N Mixed
G	Only supports the IEEE 802.11g standard	
B/G Mixed	Supports IEEE 802.11b/g standards, but 802.11g might operate at a slower speed when 802.11b clients are on the network	
G/N Mixed	Supports IEEE 802.11g/n standards, but 802.11n might operate at a slower speed if 802.11g clients are on the network	
B/G/N Mixed	Supports IEEE 802.11b/g/n standards, but 802.11g/n might operate at a slower speed if 802.11b clients are on the network	
N Only (2.4GHz)	Only supports the 2.4 GHz IEEE 802.11n standard	
5 GHz		
A	Only supports the IEEE 802.11a standard	B/G/N Mixed
A/N Mixed	Supports IEEE 802.11a/n standards, but 802.11n may operate at a slower speed if 802.11a clients are on the network	
N Only (5GHz)	Only supports the 5 GHz IEEE 802.11n standard	

Channel (for AP mode only)

Setting	Description	Factory Default
The available channels vary with the RF type setting	The channel on which the AWK should operate. The AWK-3131A-RTG plays the role of a wireless AP here.	6 (in B/G/N Mixed mode)

Channel Width (for any 11N RF type only)

Setting	Description	Factory Default
20 MHz	Select the channel width.	20 MHz
20/40 MHz	If you are not sure, use the 20/40 MHz (Auto) option	

Channel bonding

If you have selected **20/40 MHz only** in the **Channel Width** setting, this setting will automatically set the channel based on the **Channel** setting.

SSID

Setting	Description	Factory Default
Maximum of 31 characters	The SSID of a client and the SSID of the AP must be identical for the client and AP to be able to communicate with each other.	MOXA

SSID broadcast (for AP mode only)

Setting	Description	Factory Default
Enable/Disable	Use this setting to specify if the SSID can be broadcast or not	Enable

Management frame encryption

Setting	Description	Factory Default
Enable/Disable	Enables management frame encryption to protect your wireless network from DoS attacks. This function only works with Moxa's TAP and AWK-RTG series.	Disable

50ms Turbo Roaming (controller-based)

Setting	Description	Factory Default
Enable/Disable	Determines whether or not the AWK-3131A-RTG supports 50 ms roaming. This function only works with the WAC-1001, WAC-2004, TAP, and AWK-RTG series.	Disable

WLAN Security Settings

The AWK-3131A-RTG provides four standardized wireless security modes: **Open**, **WEP** (Wired Equivalent Privacy), **WPA** (Wi-Fi Protected Access), and **WPA2**. Several security modes are available in the AWK-3131A-RTG by selecting **Security mode** and **WPA type**:

- **Open**: No authentication, no data encryption.
- **WEP**: Static WEP (Wired Equivalent Privacy) keys must be configured manually.
- **WPA/WPA2-Personal**: Also known as WPA/WPA2-PSK. You will need to specify the Pre-Shared Key in the Passphrase field, which will be used by the TKIP or AES engine as a master key to generate keys that actually encrypt outgoing packets and decrypt incoming packets.
- **WPA/WPA2-Enterprise**: Also called WPA/WPA2-EAP (Extensible Authentication Protocol). In addition to device-based authentication, WPA/WPA2-Enterprise enables user-based authentication via IEEE 802.1X. The AWK-3131A-RTG can support three EAP methods: EAP-TLS, EAP-TTLS, and EAP-PEAP.

The screenshot shows the 'WLAN Security Settings' form. The 'Security mode' dropdown menu is open, displaying four options: 'Open', 'WEP', 'WPA', and 'WPA2'. The 'Open' option is currently selected. Other visible fields include 'SSID' and a 'Submit' button.

Security mode

Setting	Description	Factory Default
Open	No authentication	Open
WEP	Static WEP is used	
WPA	WPA is used	
WPA2	Fully supports IEEE 802.11i with "TKIP/AES + 802.1X"	

Open

For security reasons, you should **NOT** set security mode to Open System, since authentication and data encryption are **NOT** performed in Open System mode.

WEP (only for legacy mode)



NOTE

Moxa includes **WEP** security mode only for legacy purposes. **WEP** is highly insecure and is considered fully deprecated by the Wi-Fi alliance. We do not recommend the use of WEP security under any circumstances.

According to the IEEE 802.11 standard, WEP can be used for authentication and data encryption to maintain confidentiality. Shared (or Shared Key) authentication type is used if WEP authentication and data encryption are both needed. Normally, Open (or Open System) authentication type is used when WEP data encryption is run with authentication.

When WEP is enabled as a security mode, the length of a key (so-called WEP seed) can be specified as 64/128 bits, which is actually a 40/104-bit secret key with a 24-bit initialization vector.

The screenshot shows the 'WLAN Security Settings' form with 'WEP' selected as the security mode. Additional configuration options are visible: 'Authentication type' (Open), 'Key type' (HEX), 'Key length' (64 bits), and 'Key index' (1). There are four input fields for 'WEP key 1', 'WEP key 2', 'WEP key 3', and 'WEP key 4'. A 'Submit' button is at the bottom.

The AWK-3131A-RTG provides 4 entities of WEP key settings that can be selected to use with **Key index**.

The selected key setting specifies the key to be used as a *send-key* for encrypting traffic from the AP side to the wireless client side. All 4 WEP keys are used as *receive-keys* to decrypt traffic from the wireless client side to the AP side.

The WEP key can be presented in two **Key types**, HEX and ASCII. Each ASCII character has 8 bits, so a 40-bit (or 64-bit) WEP key contains 5 characters, and a 104-bit (or 128-bit) key has 13 characters. In hex, each character uses 4 bits, so a 40-bit key has 10 hex characters, and a 128-bit key has 26 characters.

Authentication type

Setting	Description	Factory Default
Open	Data encryption is enabled, but without authentication	Open
Shared	Data encryption and authentication are both enabled.	

Key type

Setting	Description	Factory Default
HEX	Specifies WEP keys in hex-decimal number form	HEX
ASCII	Specifies WEP keys in ASCII form	

Key length

Setting	Description	Factory Default
64 bits	Uses 40-bit secret keys with 24-bit initialization vector	64 bits
128 bits	Uses 104-bit secret key with 24-bit initialization vector	

Key index

Setting	Description	Factory Default
1-4	Specifies which WEP key is used	Open

WEP key 1-4

Setting	Description	Factory Default
ASCII type: 64 bits: 5 chars 128 bits: 13chars HEX type: 64 bits: 10 hex chars 128 bits: 26 hex chars	A string that can be used as a WEP seed for the RC4 encryption engine.	None

WPA/WPA2-Personal

WPA (Wi-Fi Protected Access) and WPA2 represent significant improvements over the WEP encryption method. WPA is a security standard based on 802.11i draft 3, while WPA2 is based on the fully ratified version of 802.11i. The initial vector is transmitted, encrypted, and enhanced with its 48 bits, twice as long as WEP. The key is regularly changed so that true session is secured.

Even though AES encryption is only included in the WPA2 standard, it is widely available in the WPA security mode of some wireless APs and clients as well. The AWK-3131A-RTG also supports AES algorithms in WPA and WPA2 for better compatibility.

Personal versions of WPA/WPA2, also known as WPA/WPA-PSK (*Pre-Shared Key*), provide a simple way of encrypting a wireless connection for high confidentiality. A **Passphrase** is used as a basis for encryption methods (or cipher types) in a WLAN connection. The passphrases should be complicated and as long as possible. There must be at least 8 ASCII characters in the Passphrase, and it could go up to 63. For security reasons, this passphrase should only be disclosed to users who need it, and it should be changed regularly.

WLAN Security Settings

SSID

MOXA

Security mode

WPA ▾

WPA type

Personal ▾

Encryption method

AES ▾

EAPOL version

1 ▾

Passphrase

.....

Key renewal

3600 (60~86400 seconds)

Submit

WPA type

Setting	Description	Factory Default
Personal	Provides Pre-Shared Key-enabled WPA and WPA2	Personal
Enterprise	Provides enterprise-level security for WPA and WPA2	

Encryption method

Setting	Description	Factory Default
TKIP**	Temporal Key Integrity Protocol is enabled	AES
AES	Advance Encryption System is enabled	
Mixed*	Provides TKIP broadcast key and TKIP+AES unicast key for some legacy AP clients. This option is rarely used.	

** This option is only available with 802.11a/b/g standard

* This option is only available for legacy mode in APs and does not support AES-enabled clients.

Passphrase

Setting	Description	Factory Default
8 to 63 characters	Master key to generate keys for encryption and decryption	None

Key renewal (for AP mode only)

Setting	Description	Factory Default
60 to 86400 seconds (1 minute to 1 day)	Specifies the time period of group key renewal	3600 (seconds)



NOTE

The **key renewal** value dictates how often the wireless AP encryption keys should be changed. The security level is generally higher if you set the key renewal value to a shorter number, which forces the encryption keys to be changed more frequently. The default value is 3600 seconds (6 minutes). Longer time periods can be considered if the line is not very busy.

WPA/WPA2-Enterprise (for AP mode)

By setting **WPA type** to **Enterprise**, you can use **EAP** (*Extensible Authentication Protocol*), a framework authentication protocol used by 802.1X to provide network authentication. In these Enterprise-level security modes, a back-end RADIUS (Remote Authentication Dial-In User Service) server is needed if IEEE 802.1X functionality is enabled in WPA /WPA2. The IEEE 802.1X protocol also offers the possibility of carrying out an efficient connection authentication on a large-scale network. It is not necessary to exchange keys or passphrases.

WLAN Security Settings

SSID	MOXA
Security mode	WPA ▼
WPA type	Enterprise ▼
Encryption method	AES ▼
EAPOL version	1 ▼
Primary RADIUS server IP	<input type="text"/>
Primary RADIUS server port	1812
Primary RADIUS shared key	<input type="text"/>
Secondary RADIUS server IP	<input type="text"/>
Secondary RADIUS server port	1812
Secondary RADIUS shared key	<input type="text"/>
Key renewal	3600 (60~86400 seconds)

Submit

WPA type

Setting	Description	Factory Default
Personal	Provides Pre-Shared Key-enabled WPA and WPA2	Personal
Enterprise	Provides enterprise-level security for WPA and WPA2	

Encryption method

Setting	Description	Factory Default
TKIP**	Temporal Key Integrity Protocol is enabled	AES
AES	Advance Encryption System is enabled	
Mixed*	Provides TKIP broadcast key and TKIP+AES unicast key for some legacy AP clients. This option is rarely used.	

** This option is only available with 802.11a/b/g standard

* This option is available only for legacy mode in APs and does not support AES-enabled clients.

Primary/Secondary RADIUS server IP

Setting	Description	Factory Default
The IP address of RADIUS server	Specifies the delegated RADIUS server for EAP	None

Primary/Secondary RADIUS port

Setting	Description	Factory Default
Port number	Specifies the port number of the delegated RADIUS server	1812

Primary/ Secondary RADIUS shared key

Setting	Description	Factory Default
Max. of 31 characters	The secret key shared between AP and RADIUS server	None

Key renewal

Setting	Description	Factory Default
60 to 86400 seconds (1 minute to 1 day)	Specifies the time period of group key renewal	3600 (seconds)

WPA/WPA2-Enterprise (for Client/Client-Router mode)

When used as a client, the AWK-3131A-RTG can support three EAP methods (or EAP protocols): EAP-TLS, EAP-TTLS, and EAP-PEAP, corresponding to WPA/WPA-Enterprise settings on the AP side.

WLAN Security Settings

SSID

MOXA

Security mode

WPA2 ▾

WPA type

Enterprise ▾

Encryption method

TKIP ▾

EAPOL version

1 ▾

EAP protocol

TLS ▾

Certificate issued to

TLS

Certificate issued by

TTLS

Certificate expiration date

PEAP

Submit

Encryption method

Setting	Description	Factory Default
TKIP**	Temporal Key Integrity Protocol is enabled	TKIP
AES	Advance Encryption System is enabled	

** This option is only available with 802.11a/b/g standard.

EAP protocol


Setting	Description	Factory Default
TLS	Specifies Transport Layer Security protocol	TLS
TTLS	Specifies Tunneled Transport Layer Security	
PEAP	Specifies Protected Extensible Authentication Protocol, or Protected EAP	

Before choosing the EAP protocol for your WPA/WPA2-Enterprise settings on the client end, please contact the network administrator to make sure the system supports the protocol on the AP end. Detailed information on these three popular EAP protocols is presented in the following sections.

EAP-TLS

TLS is the standards-based successor to Secure Socket Layer (SSL). It can establish a trusted communication channel over a distrusted network. TLS provides mutual authentication through certificate exchange. EAP-TLS is also secure to use. You are required to submit a digital certificate to the authentication server for validation, but the authentication server must also supply a certificate.

You can use **Basic WLAN Setup > WLAN Certificate Settings** to import your WLAN certificate and enable EAP-TLS on the client end.

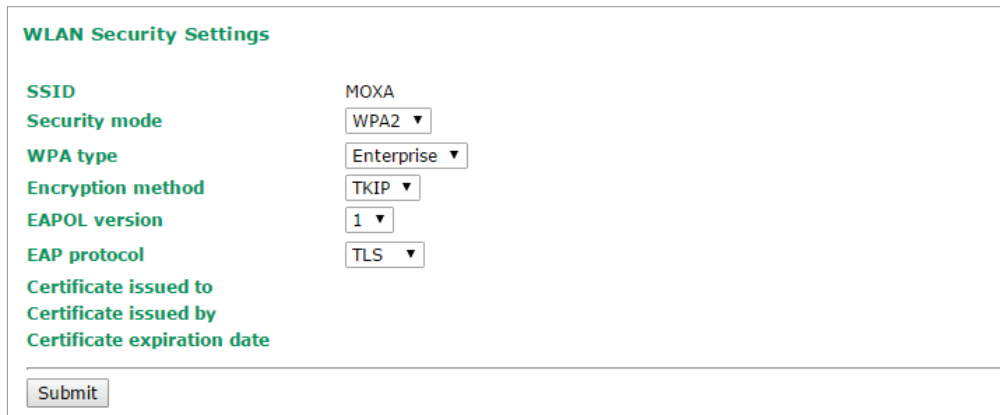

WLAN Security Settings

SSID	MOXA
Security mode	WPA2 ▼
WPA type	Enterprise ▼
Encryption method	TKIP ▼
EAPOL version	1 ▼
EAP protocol	TLS ▼
Certificate issued to	
Certificate issued by	
Certificate expiration date	

You can check the current certificate status in **Current Status** if it is available.

- **Certificate issued to:** Shows the certificate user
- **Certificate issued by:** Shows the certificate issuer
- **Certificate expiration date:** Indicates when the certificate has expired

EAP-TTLS

It is usually much easier to re-use existing authentication systems, such as a Windows domain or Active Directory, LDAP directory, or Kerberos realm, rather than creating a parallel authentication system. As a result, TTLS (Tunneled TLS) and PEAP (Protected EAP) are used to support the use of so-called "legacy authentication methods."

TTLS and PEAP work in a similar way. First, they establish a TLS tunnel (EAP-TLS for example), and validate whether the network is trustworthy with digital certificates on the authentication server. This step establishes a tunnel that protects the next step (or "inner" authentication), and consequently is sometimes referred to as "outer" authentication. The TLS tunnel is then used to encrypt an older authentication protocol that authenticates the user for the network.

As you can see, digital certificates are still needed for outer authentication in a simplified form. Only a small number of certificates are required, which can be generated by a small certificate authority. Certificate reduction makes TTLS and PEAP much more popular than EAP-TLS.

The AWK-3131A-RTG provides some non-cryptographic EAP methods, including **PAP, CHAP, MS-CHAP, and MS-CHAP-V2**. These EAP methods are not recommended for direct use on wireless networks. However, they may be useful as inner authentication methods with TTLS and PEAP.

Because the inner and outer authentications can use distinct user names in TTLS and PEAP, you can use an anonymous user name for the outer authentication, with the true user name only shown through the encrypted channel. Keep in mind that not all client software supports anonymous alteration. Confirm this with the network administrator before you enable identity hiding in TTLS and PEAP.

WLAN Security Settings

SSID: MOXA

Security mode: WPA2 ▼

WPA type: Enterprise ▼

Encryption method: TKIP ▼

EAPOL version: 1 ▼

EAP protocol: TTLS ▼

TTLS inner authentication: MS-CHAP-V2 ▼

Anonymous name:

User name:

Password:

TTL inner authentication

Setting	Description	Factory Default
PAP	Password Authentication Protocol is used	MS-CHAP-V2
CHAP	Challenge Handshake Authentication Protocol is used	
MS-CHAP	Microsoft CHAP is used	
MS-CHAP-V2	Microsoft CHAP version 2 is used	

Anonymous

Setting	Description	Factory Default
Max. of 31 characters	A distinct name used for outer authentication	None

User name & Password

Setting	Description	Factory Default
	User name and password used in inner authentication	None

PEAP

There are a few differences in the TTLS and PEAP inner authentication procedures. TTLS uses the encrypted channel to exchange attribute-value pairs (AVPs), while PEAP uses the encrypted channel to start a second EAP exchange inside of the tunnel. The AWK-3131A-RTG provides **MS-CHAP-V2** merely as an EAP method for inner authentication.

WLAN Security Settings

SSID: MOXA

Security mode: WPA2 ▼

WPA type: Enterprise ▼

Encryption method: TKIP ▼

EAPOL version: 1 ▼

EAP protocol: PEAP ▼

Inner EAP protocol: MS-CHAP-V2 ▼

Anonymous name:

User name:

Password:

Inner EAP protocol

Setting	Description	Factory Default
MS-CHAP-V2	Microsoft CHAP version 2 is used	MS-CHAP-V2

Anonymous

Setting	Description	Factory Default
Max. of 31 characters	A distinct name used for outer authentication	None

User name & Password

Setting	Description	Factory Default
	User name and password used in inner authentication	None

Advanced Wireless Settings

Additional wireless-related parameters are presented in this section to help you set up your wireless network in detail.

Advanced Wireless Settings

Transmission rate

Auto ▼

Multicast rate

6M ▼

Guard interval

800ns ▼

Maximum transmission power

12 dBm (-1 dBm/MHz) ▼

Beacon interval

100 (40~1000ms)

DTIM interval

1 (1~15)

Fragmentation threshold

2346 (256~2346)

RTS threshold

2346 (256~2346)

Antenna

Both ▼

WMM

Enable ▼

Roaming priority

Priority 2 ▼

RF index

RF Index1 ▼

Submit

Transmission Rate (for A, B, G, B/G mixed, and N modes only)

Setting	Description	Factory Default
Auto	The AWK-3131A-RTG senses and adjusts the data rate automatically	Auto
Available rates	Users can manually select a target transmission data rate	

Multicast Rate (for AP mode only)

Setting	Description	Factory Default
Multicast rate (6M ~ 54M)	You can set a fixed multicast rate for the transmission of broadcast and multicast packets on a per-radio basis. This parameter can be useful in an environment where multicast video streaming is occurring in the wireless medium, provided that the wireless clients are capable of handling the configured rate.	6M

Guard Interval

Setting	Description	Factory Default
Guard Interval	Guard interval is used to ensure that distinct transmissions do not interfere with one another. You can select the guard interval manually for Wireless-N connections. The two options are Short (400 ns) and Long (800 ns). NOTE: This function can be modified in N mode only.	800 ns.

Maximum transmission power

Setting	Description	Factory Default
Available Power	Users can manually select a target power to mask max output power. Because different transmission rates might have their own max output power, please reference product datasheet. The available setting is from 3 to 26. <i>dBm/MHz</i> : The density of transmission power in channel width.	12 dBm (-1 dBm/MHz)



NOTE

Most countries define a limit for the Equivalent Isotropically Radiated Power (EIRP) for an RF transmitting system. The EIRP should not exceed the allowed value. $EIRP = \text{transmission power} + \text{antenna gain (dBi)}$.



NOTE

Transmission power indicates the maximum value of transmission power which the user plans. However, the real transmitted power depends on the radio module and some facts, such as country, regulatory limitations and data rate. Please check the Transmission power in Status > Wireless Status for a real and updated value of transmission power, which the AWK is currently using.

You can refer to the related glossaries in the reference section for detailed information about the above-mentioned settings. By setting these parameters properly, you can better tune the performance of your wireless network.

Beacon Interval (for AP mode only)

Setting	Description	Factory Default
Beacon Interval (40 to 1000 ms)	Indicates the frequency interval of the beacon	100 (ms)

DTIM Interval (for AP mode only)

Setting	Description	Factory Default
Data Beacon Rate (1 to 15)	Indicates how often the AWK-3131A-RTG sends out a Delivery Traffic Indication Message	1

Fragmentation threshold

Setting	Description	Factory Default
Fragment Length (256 to 2346)	Specifies the maximum size a data packet before splitting and creating another new packet	2346

RTS threshold

Setting	Description	Factory Default
RTS/CTS Threshold (256 to 2346)	Determines how large a packet can be before the Access Point coordinates transmission and reception to ensure efficient communication	2346

Antenna

Setting	Description	Factory Default
A/B/Both	Specifies the output antenna port. Setting "Antenna" to Auto allows 2x2 MIMO communication under 802.11n and 2T2R* communication in legacy 802.11a/b/g modes.	Both

* Different from 802.11n's multiple spatial data stream (2x2 MIMO), which doubles the throughput, 2T2R transmits/receives the same piece of data on both antenna ports.

WMM

Setting	Description	Factory Default
Enable/Disable	WMM is a QoS standard for WLAN traffic. Voice and video data will be given priority bandwidth when enabled with WMM supported wireless clients. NOTE: This setting can be enabled/disabled only in A, B, and B/G Mixed modes. For N, G/N Mixed, B/G/N Mixed, and A/N Mixed modes, this setting is enabled by default.	Disable



READ THIS BEFORE CHANGING THE DFS SETTING

DFS (Dynamic Frequency Selection) is a mechanism to allow unlicensed wireless devices to share spectrum with existing radar systems by detecting radar systems and avoid causing interference with them.

Roaming Priority (Only for AP mode)

Setting	Description	Factory Default
Priority 1/2	The roaming priority should be set based on how the radios are deployed along the trackside. Priority 1: radios along the trackside are deployed with open air radiating antennas. Priority 2: radios along the trackside are deployed with leaky feeder like coverage patterns. Due to the differences in coverage patterns between different deployment scenarios, the roaming priority you select will impact roaming performance.	Priority 2

AeroLink Protection (Only for Client mode)

Setting	Description	Factory Default
Disable/L2/L3	<ul style="list-style-type: none">• Enable AeroLink Protection to allow wireless clients on the same LAN network to automatically negotiate with each other and form a redundant wireless communication. For more details, see Status > AeroLink Protection Status.• Select L2 for roaming on an L2 trackside network.• Select L3 for roaming on an L3 trackside network.	Disabled

AeroLink Protection configuration interface showing Layer 2 and Layer 3 settings. Layer 2 settings include LAN Interface (LAN 1) and WLAN Interface (WLAN 1). Layer 3 settings include LAN Interface (LAN 1), WLAN Interface (WLAN 1), Virtual LAN IP, and Virtual WLAN IP.

When L3 is selected, Virtual LAN IP and Virtual WLAN IP are shown as additional setting parameters.

Virtual LAN IP: This IP should be defined as the gateway IP for onboard devices so that all incoming and outgoing traffic can be routed properly via this common IP in case of any role changes of the onboard clients. All AeroLink protected clients within the same subnet need to be configured with the same virtual LAN IP.


Virtual WLAN IP: This IP should be defined as the virtual gateway IP for the wayside router, which can route traffic to any onboard client regardless of the client's home WAC. This IP only needs to be configured when different clients have to backup each other while the clients are registered to different WAC units. For the router to work properly, all clients and the wayside router will need to be configured to have this routing rule (i.e., to use this virtual WLAN IP).

How AeroLink Protection Works

In vehicle-to-ground applications, it is essential to minimize system downtime and maximize system availability of the train-to-ground link to ensure proper communication. Moxa's AeroLink Protection provides a reliable wireless network-level redundancy protocol to ensure that there will always be a live onboard-to-ground link, even when failures occur:


1. **Communication Failover:** AeroLink Protection members can negotiate with each other to automatically elect an Active node for data communication. If the Active node is no longer capable of sending data across to its access point, it will inform other Backup nodes to resume the communication via another path.
2. **Frequency-Interference Failover:** This concept is similar to "Communication Failover." If the communication frequency is interfered with and data can no longer be transmitted over the current active frequency, the connection is resumed via a backup frequency.
3. **Device Failover:** After handling communication and frequency failures, in order to provide a wireless network free of single points of failure, AeroLink Protection also checks the device status. If the Active node has a power failure, the Backup nodes will automatically resume the wireless communication.
4. **Scalable:** AeroLink Protection is designed to allow multiple backup paths, making it possible for users to realize a complete redundant wireless network free from all the above failure types.

5. Fast Recovery: In addition to maintaining a redundant wireless network, providing uninterrupted communication when a failure occurs is equally important. AeroLink Protection is designed to recover from a failure in under 300 ms.



NOTE

When you enable the AeroLink Protection function, management packets will be broadcast every 10 ms so that the devices can negotiate with each other. If these broadcast packets are overwhelming your network, you can disable this function.

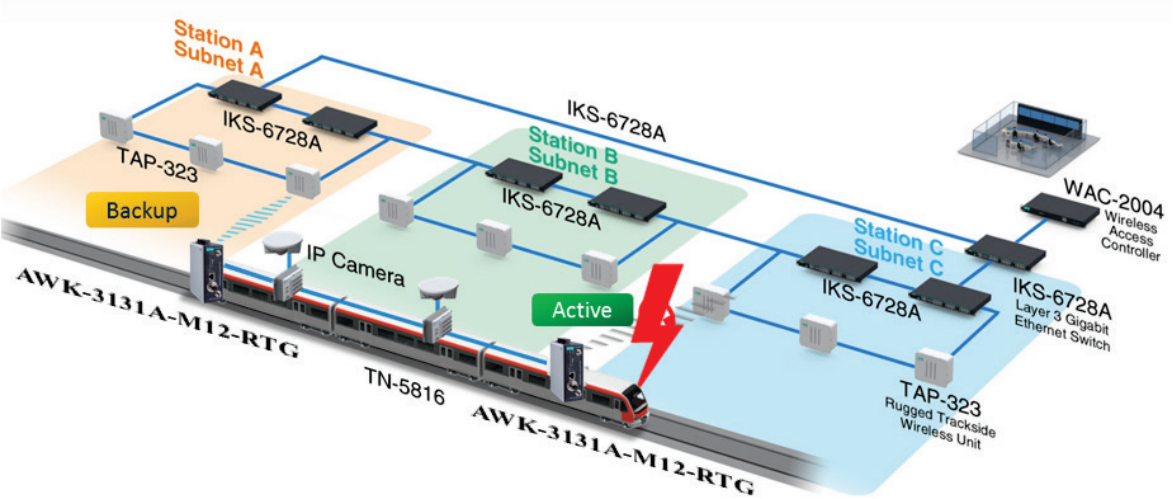

Turbo Roaming

Setting	Description	Factory Default
Enable/ Disable	Moxa’s Turbo Roaming can enable rapid handover when the AWK-3131A-RTG, as a client or client-router, roams among a group of APs.	Disable

When Turbo Roaming is enabled, **Turbo Roaming type**, **RF type**, **Dual link option**, and **Scan channels** will be shown as follows. There are two options available for **Turbo Roaming type**; **50ms (controller-based)** that only works with the RTG version of the access point and the WAC-1001 and WAC-2004, and **150ms (client-based)** that supports all brands of AP. **Dual link** reduces the packet-loss rate when roaming between difference APs; this function only works with a single channel roaming structure. The RF type shows the current **RF type** that this client is using. There are three Scan channels available. Note that the **Scan channels** may need to be modified when the **RF type** is changed. (For example, channel 36 is not available in **B**, **G**, or **B/G Mix** mode.)

Turbo Roaming

RF type

Turbo Roaming type

Dual link option

Scan channels

☒ Enable

B/G/N Mixed

50ms (controller-based) ▼

Enable ▼

6 ▼

Not scanning ▼

Not scanning ▼

If you set **Turbo Roaming type** to **150ms (client-based)**, three additional roaming parameters, **Roaming threshold**, **Roaming difference** and **AP alive check** for 802.11b/g (or b/a) are shown as follows:


Turbo Roaming	<input checked="" type="checkbox"/> Enable
RF type	B/G/N Mixed
Turbo Roaming type	150ms (client-based) ▼
AP alive check	Disable ▼
Roaming threshold	-75 dBm (-85 ~ -35)
Roaming difference	7 dB (5 ~ 20)
Scan channels	6 ▼
	Not scanning ▼
	Not scanning ▼

Roaming Parameters

Setting	Description	Factory Default
Roaming threshold	When the current RSSI value is lower than the "roaming threshold," the client will start the roaming process.	-75
Roaming difference	When the RSSI of a candidate AP is greater than "the current RSSI value plus the roaming difference," the client will roam to this new candidate AP.	7
AP alive check	When "AP alive check" is enabled, the client will actively send alive-check packets over the wireless network; APs who receive the packets will respond to indicate that they are currently available. By doing this, the client can maintain a ready list of available APs, and then quickly hand over to a new AP once it loses contact with the AP it is currently connected to.	-82

Roaming Threshold Concept

Roaming Threshold Concept

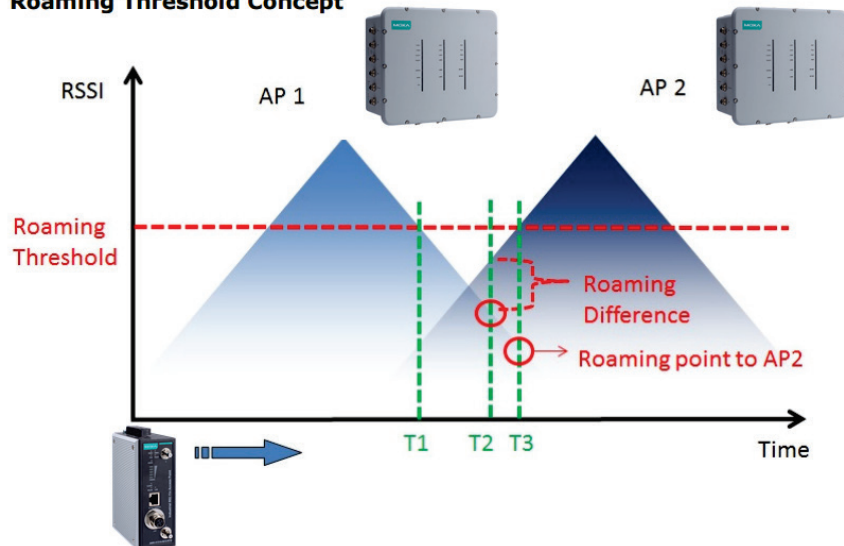

T1 = Probing for new AP candidate to connect (background scan)

T2 = At this point is when the roaming difference conditions are met and the client will initiate the roaming

T3 = At this point the client has successfully roamed over to the new AP2



NOTE

When 50 ms Turbo Roaming is enabled without using the WAC-1001 or WAC-2004, the connection between the AP and client will not work.

WLAN Certification Settings (Only For EAP-TLS in Client Mode)

When EAP-TLS is used, a WLAN Certificate will be required at the client end to support WPA/WPA2-Enterprise. The AWK-3131A-RTG can support the **PKCS #12**, also known as *Personal Information Exchange Syntax Standard*, certificate formats that define file formats commonly used to store private keys with accompanying public key certificates, protected with a password-based symmetric key.

WLAN Certificate Settings

Current status
Certificate issued to
Certificate issued by
Certificate expiration date

Current Status displays information for the current WLAN certificate, which has been imported into the AWK-3131A-RTG. Nothing will be shown if a certificate is not available.

Certificate issued to: Shows the certificate user

Certificate issued by: Shows the certificate issuer

Certificate expiration date: Indicates when the certificate has expired

You can import a new WLAN certificate in **Import WLAN Certificate** by following these steps, in order:

1. Input the corresponding password (or key) in the **Certificate private password** field and then click **Submit** to set the password.
2. The password will be displayed in the Certificate private password field. Click on the **Browse** button in **Select certificate/key file** and select the certificate file.
3. Click **Upload Certificate File** to import the certificate file. If the import succeeds, you can see the information uploaded in **Current Certificate**. If it fails, you may need to return to step 1 to set the password correctly and then import the certificate file again.

WLAN Certificate Settings

Current status
Certificate issued to
Certificate issued by
Certificate expiration date

Certificate private password

Select certificate/key file No file chosen



NOTE

The WLAN certificate will remain after the AWK-3131A-RTG reboots. Even though it has expired, it can still be seen on the **Current Certificate**.

WAC Settings (AP Mode Only)

Controller-based Turbo Roaming function is automatically enabled when you enable the **50ms Turbo Roaming (controller-based)** option on the **Wireless Settings > WLAN > Basic Wireless Settings > Edit** page. The **Primary WAC IP address**, **Backup WAC IP address**, and **Roaming domain** fields are displayed.

WAC Settings (AP mode only)

Controller-based Turbo Roaming

Primary WAC IP address

Backup WAC IP address

Roaming domain FF:90:E8: : :

Primary WAC IP address

Setting	Description	Factory Default
IP address	Enter the IP address of the primary WAC-1001 or WAC-2004	None

Backup WAC IP address

Setting	Description	Factory Default
IP address	Enter the IP address of the backup WAC-1001 or WAC-2004	None

Primary WAC IP address

Setting	Description	Factory Default
6 Hex characters	Specifies the area served by the WAC-1001 or WAC-2004. All related controllers, APs, and clients use this IP address as identification to work and communicate with each other.	None

Advanced Settings

Several advanced functions are available to increase the functionality of your AWK-3131A-RTG and wireless network system. A VLAN is a collection of clients and hosts grouped together as if they were connected to the broadcast domains in a layer-2 network. The DHCP server helps you deploy wireless clients efficiently. Packet filters provide security mechanisms, such as firewalls, in different network layers. Moreover, the AWK-3131A-RTG can support STP/RSTP protocol to increase reliability across the entire network, and SNMP support can make network management easier.

Using Virtual LAN

Setting up Virtual LANs (VLANs) on your AWK series increases the efficiency of your network by dividing the LAN into logical segments, as opposed to physical segments. In general, VLANs are easier to manage.

The Virtual LAN (VLAN) Concept

What is a VLAN?

A virtual LAN, commonly known as a VLAN, is a group of hosts with a common set of requirements that communicate as if they were attached to the same broadcast domain, regardless of their physical location. A VLAN has the same attributes as a physical LAN, but it allows for end stations to be grouped together even if they are not located on the same network switch. Network reconfiguration can be done through software instead of physically relocating devices.

VLANs now extend as far as the reach of the access point signal. Clients can be segmented into wireless sub-networks via SSID and VLAN assignment. A Client can access the network by connecting to an AP configured to support its assigned SSID/VLAN.

Benefits of VLANs

VLANs are used to conveniently, efficiently, and easily manage your network in the following ways:

- Manage adds, moves, and changes from a single point of contact
- Define and monitor groups
- Reduce broadcast and multicast traffic to unnecessary destinations
- Improve network performance and reduce latency
- Increase security
- Secure network restricts members to resources on their own VLAN
- Clients roam without compromising security

VLAN Workgroups and Traffic Management


The AP assigns clients to a VLAN based on a Network Name (SSID). The AP can support up to 9 SSIDs per radio interface, with a unique VLAN configurable per SSID.

The AP matches packets transmitted or received to a network name with the associated VLAN. Traffic received by a VLAN is only sent on the wireless interface associated with that same VLAN. This eliminates unnecessary traffic on the wireless LAN, conserving bandwidth and maximizing throughput.

In addition to enhancing wireless traffic management, the VLAN-capable AP supports easy assignment of wireless users to workgroups. In a typical scenario, each user VLAN represents a department workgroup; for example, one VLAN could be used for a marketing department and the other for a human resource department.

In this scenario, the AP would assign every packet it accepted to a VLAN. Each packet would then be identified as marketing or human resource, depending on which wireless client received it. The AP would insert VLAN headers or “tags” with identifiers into the packets transmitted on the wired backbone to a network switch.

Finally, the switch would be configured to route packets from the marketing department to the appropriate corporate resources such as printers and servers. Packets from the human resource department could be restricted to a gateway that allowed access to only the Internet. A member of the human resource department could send and receive e-mail and access the Internet, but would be prevented from accessing servers or hosts on the local corporate network.

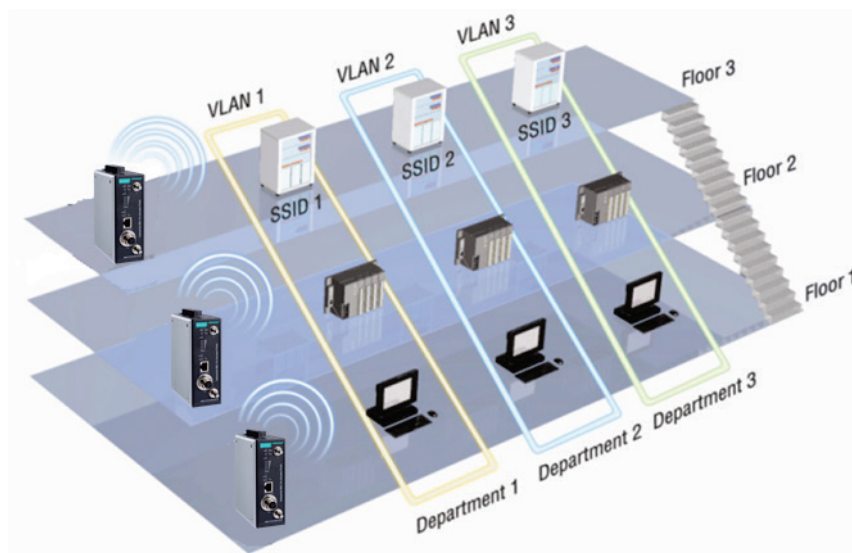

Configuring Virtual LAN

VLAN Settings

To configure the AWK's VLAN, use the VLAN Setting page to configure the ports.

VLAN Settings

Management VLAN ID:

Port	PVID	VLAN Tagged (Please use comma to separate multiple VLAN tags.)
LAN 1	<input type="text" value="1"/>	<input type="text"/>
LAN 2	<input type="text" value="1"/>	<input type="text"/>
MOXA (WLAN 1)	<input type="text" value="1"/>	<input type="text"/>

Submit

Management VLAN ID

Setting	Description	Factory Default
VLAN ID ranges from 1 to 4094	Set the management VLAN of this AWK.	1

Port

Type	Description	Trunk Port
LAN	This port is the LAN port on the AWK.	Yes
WLAN	This is a wireless port for the specific SSID. This field will refer to the SSID that you have created. If more SSIDs have been created, new rows will be added.	

Port PVID

Setting	Description	Factory Default
VLAN ID ranging from 1 to 4094	Set the port's VLAN ID for devices that connect to the port. The port can be a LAN port or WLAN ports.	1

VLAN Tagged

Setting	Description	Factory Default
A comma-separated list of VLAN IDs. Each of the VLAN IDs range from 1 to 4094. For example: 1,2,3,4.	Specify which VLANs can communicate with this specific VLAN.	(Empty)



NOTE

The VLAN feature can allow wireless clients to manage the AP. If the VLAN Management ID matches a VLAN ID, then those wireless clients who are members of that VLAN will have AP management access.



CAUTION

Once a VLAN Management ID is configured and is equivalent to one of the VLAN IDs on the AP, all members of that User VLAN will have management access to the AP. Be careful to restrict VLAN membership to those with legitimate access to the AP.

DHCP Server

DHCP (Dynamic Host Configuration Protocol) is a networking protocol that allows administrators to assign temporary IP addresses to network computers by "leasing" an IP address to a user for a limited amount of time, instead of assigning permanent IP addresses.

The AWK-3131A-RTG can act as a simplified DHCP server and easily assign IP addresses to your DHCP clients by responding to the DHCP requests from the client ends. The IP-related parameters you set on this page will also be sent to the client.

You can also assign a static IP address to a specific client by entering its MAC address. The AWK-3131A-RTG provides a **Static DHCP mapping** list with up to 16 entities. Be reminded to check the **Active** check box for each entity to activate the setting.

You can check the IP assignment status under **Status > DHCP Client List**.

DHCP Server (for AP/Client-Router mode only)

DHCP server
Default gateway
Subnet mask
Primary DNS server
Secondary DNS server
Start IP address
Maximum number of users
Client lease time

Disable ▾

 (1~128 users)
 (5~1440 minutes)

Static DHCP mapping

No	<input type="checkbox"/> Active	IP Address	MAC Address
1	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
2	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
3	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
4	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
5	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
6	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
7	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
8	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
9	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
10	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
11	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
12	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
13	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
14	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
15	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
16	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>

Submit

DHCP server

Setting	Description	Factory Default
Enable	Enables AWK-3131A-RTG as a DHCP server	Disable
Disable	Disable DHCP server function	

Default gateway

Setting	Description	Factory Default
IP address of a default gateway	The IP address of the router that connects to an outside network	None

Subnet mask

Setting	Description	Factory Default
subnet mask	Identifies the type of sub-network (e.g., 255.255.0.0 for a Class B network, or 255.255.255.0 for a Class C network)	None

Primary/ Secondary DNS server

Setting	Description	Factory Default
IP address of Primary/ Secondary DNS server	The IP address of the DNS Server used by your network. After entering the DNS Server's IP address, you can use URL as well. The Secondary DNS server will be used if the Primary DNS server fails to connect.	None

Start IP address

Setting	Description	Factory Default
IP address	Indicates the IP address which AWK-3131A-RTG can start assigning	None

Maximum number of users

Setting	Description	Factory Default
1-128 users	Specifies how many IP address can be assigned continuously	None

Client lease time

Setting	Description	Factory Default
5-1440 minutes	The lease time for which an IP address is assigned. The IP address may go expired after the lease time is reached.	5 (minutes)

Packet Filters

The AWK-3131A-RTG includes various filters for **IP-based** packets going through LAN and WLAN interfaces. You can set these filters as a firewall to help enhance network security.

MAC Filter

The AWK-3131A-RTG's MAC filter is a policy-based filter that can allow or filter out IP-based packets with specified MAC addresses. The AWK-3131A-RTG provides 8 entities for setting MAC addresses in your filtering policy. Remember to check the Active check box for each entity to activate the setting.

MAC Filters

Enable

Policy

No	<input type="checkbox"/> Active	Name	MAC address
1	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
2	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
3	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>

Enable

Setting	Description	Factory Default
Enable	Enables MAC filter	Disable
Disable	Disables MAC filter	

Policy

Setting	Description	Factory Default
Accept	Only the packets fitting the entities on list can be allowed.	Drop
Drop	Any packet fitting the entities on list will be denied.	



ATTENTION

Be careful when you enable the filter function:

Drop + "no entity on list is activated" = all packets are **allowed**.

Accept + "no entity on list is activated" = all packets are **denied**.

IP Protocol Filter

The AWK-3131A-RTG's IP protocol filter is a policy-based filter that can allow or filter out IP-based packets with specified IP protocol and source/destination IP addresses.

The AWK-3131A-RTG provides 8 entities for setting IP protocol and source/destination IP addresses in your filtering policy. Four IP protocols are available: **All**, **ICMP**, **TCP**, and **UDP**. You must specify either the Source IP or the Destination IP. By combining IP addresses and netmasks, you can specify a single IP address or a range of IP addresses to accept or drop. For example, "IP address 192.168.1.1 and netmask 255.255.255.255" refers to the sole IP address 192.168.1.1. "IP address 192.168.1.1 and netmask 255.255.255.0" refers to the range of IP addresses from 192.168.1.1 to 192.168.1.255. Remember to check the **Active** check box for each entity to activate the setting.

IP Protocol Filters

Enable

Policy

No	<input type="checkbox"/> Active	Protocol	Source IP	Source netmask	Destination IP	Destination netmask
1	<input type="checkbox"/>	All				
2	<input type="checkbox"/>	All				
3	<input type="checkbox"/>	All				

Enable

Setting	Description	Factory Default
Enable	Enables IP protocol filter	Disable
Disable	Disables IP protocol filter	

Policy

Setting	Description	Factory Default
Accept	Only the packets fitting the entities on the list can be allowed	Drop
Drop	Any packet fitting the entities on the list will be denied	



ATTENTION

Be careful when you enable the filter function:

Drop + "no entity on list is activated" = all packets are **allowed**.

Accept + "no entity on list is activated" = all packets are **denied**.

TCP/UDP Port Filter

The AWK-3131A-RTG's TCP/UDP port filter is a policy-based filter that can allow or filter out TCP/UDP-based packets with a specified source or destination port.

The AWK-3131A-RTG provides 8 entities for setting the range of source/destination ports of a specific protocol. In addition to selecting TCP or UDP protocol, you can set either the source port, destination port, or both. The end port can be left empty if only a single port is specified. Of course, the end port cannot be larger than the start port.

The **Application name** is a text string that describes the corresponding entity with up to 31 characters. Remember to check the **Active** check box for each entity to activate the setting.

TCP/UDP Port Filters

Enable

Policy

No	<input type="checkbox"/> Active	Source port	Destination port	Protocol	Application name
1	<input type="checkbox"/>	<input type="text"/> ~ <input type="text"/>	<input type="text"/> ~ <input type="text"/>	TCP <input type="button" value="v"/>	<input type="text"/>
2	<input type="checkbox"/>	<input type="text"/> ~ <input type="text"/>	<input type="text"/> ~ <input type="text"/>	TCP <input type="button" value="v"/>	<input type="text"/>
3	<input type="checkbox"/>	<input type="text"/> ~ <input type="text"/>	<input type="text"/> ~ <input type="text"/>	TCP <input type="button" value="v"/>	<input type="text"/>

Enable

Setting	Description	Factory Default
Enable	Enables the TCP/UDP port filter	Disable
Disable	Disables the TCP/UDP port filter	

Policy

Setting	Description	Factory Default
Accept	Only the packets fitting the entities on list can be allowed.	Drop
Drop	Any packet fitting the entities on list will be denied.	



ATTENTION

Be careful when you enable the filter function:

Drop + “no entity on list is activated” = all packets are **allowed**.

Accept + “no entity on list is activated” = all packets are **denied**.

Static Route (For Client-Router Mode Only)

The Static Routing page is used to configure AWK-3131A-RTG’s static routing table.

Static Route(For Client-Router mode only)

No	<input type="checkbox"/> Active	Destination	Netmask	Gateway	Metric	Interface
1	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text" value="15"/>	LAN <input type="button" value="v"/>
2	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text" value="15"/>	LAN <input type="button" value="v"/>
3	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text" value="15"/>	LAN <input type="button" value="v"/>

Active

Click the checkbox to enable Static Routing.

Destination

You can specify the destination IP address.

Netmask

This option is used to specify the subnet mask for this IP address.

Gateway

The IP address of the router that connects the LAN to an external network.

Metric


Use this option to specify a “cost” for accessing the neighboring network.

Interface


You can select which interface does your routing rules would be set.

NAT Settings/Port Forwarding (For Client-Router Mode Only)

Network Address Translation (NAT)—or more specifically, one-to-many NAT, NAPT, or PAT—is supported to facilitate the Client-Router operation mode. This feature translates the out-going communication from multiple private IPs to a single external IP (WLAN IP) with randomly assigned port for return traffic.

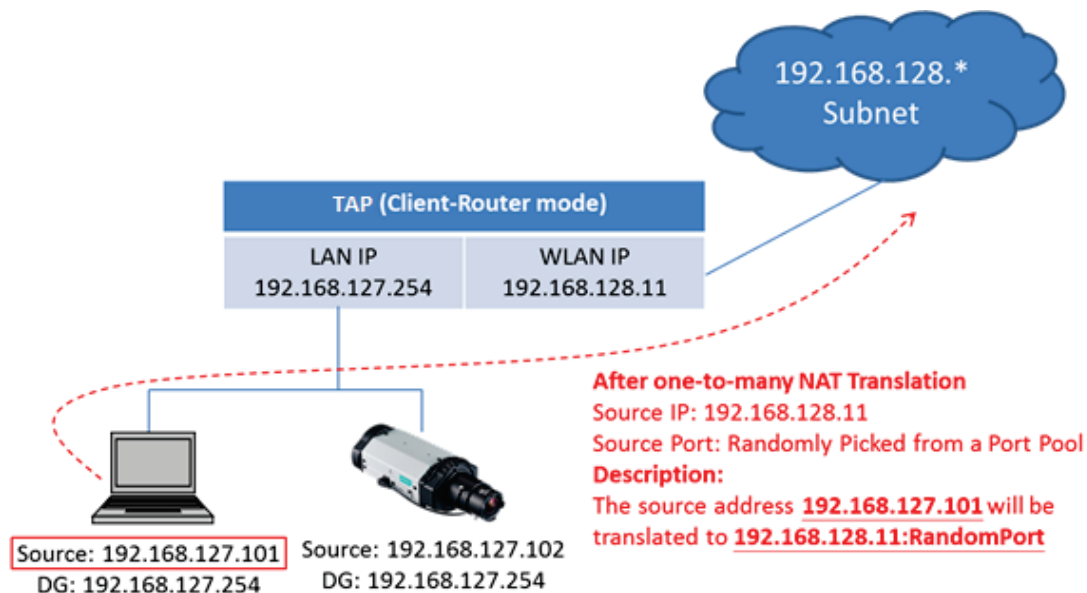

Port Forwarding is needed to allow external devices to initiate communication. Port Forwarding specifies a static map between external ports (WAN Port) and internal IP/port combos (LAN IP/LAN Port)

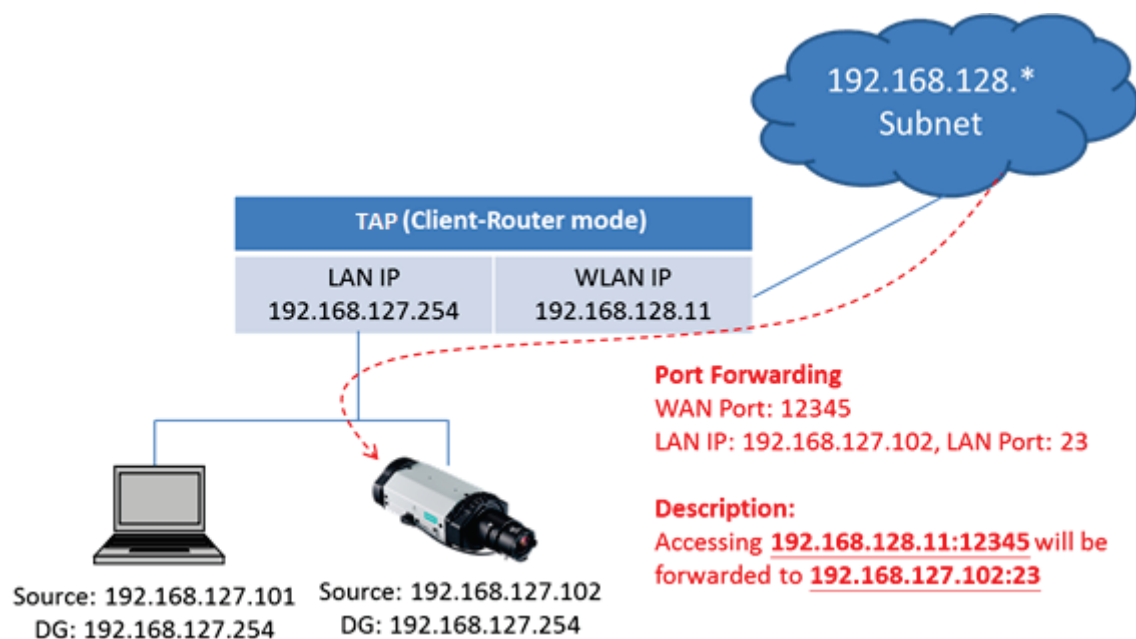

Enabling NAT and Port Forwarding provides the following benefits:

- Uses the NAT function to hide the Internal IP address of a critical network or device to increase the level of security of industrial network applications.
- Uses the same private IP address for different, but identical, groups of Ethernet devices. For example, 1-to-1 NAT makes it easy to duplicate or extend identical production lines

NAT/Port Forwarding (For Client-Router mode only)

NAT Disable ▾

No	Active	Protocol	WAN Port	LAN IP	LAN Port
1	<input type="checkbox"/>	TCP ▾			
2	<input type="checkbox"/>	TCP ▾			
3	<input type="checkbox"/>	TCP ▾			
4	<input type="checkbox"/>	TCP ▾			
5	<input type="checkbox"/>	TCP ▾			
6	<input type="checkbox"/>	TCP ▾			
7	<input type="checkbox"/>	TCP ▾			
8	<input type="checkbox"/>	TCP ▾			

NAT

Setting	Description	Factory Default
Enable/Disable	Enables or disables the NAT translation	Disable

Port Forwarding

Active: Click the checkbox to enable Port Forwarding rule(s).

Protocol: Specifies the communication protocol.

WAN Port: Specifies the external port to be forwarded to.

LAN IP: Specifies the "forward to" LAN IP.

LAN Port: Specifies the "forward to" LAN Port.

SNMP Agent

The AWK-3131A-RTG supports SNMP V1/V2c/V3. SNMP V1 and SNMP V2c use a community string match for authentication, which means that SNMP servers access all objects with read-only or read/write permissions using the community string *public/private* (default value). SNMP V3, which requires you to select an authentication level of MD5 or SHA, is the most secure protocol. You can also enable data encryption to enhance data security.

The AWK-3131A-RTG's MIB can be found in the software CD and supports reading the attributes via SNMP. (Only **get** method is supported.)

SNMP security modes and security levels supported by the AWK-3131A-RTG are shown in the following table. Select the security mode and level that will be used to communicate between the SNMP agent and manager.

Protocol Version	Setting on UI web page	Authentication Type	Data Encryption	Method
SNMP V1, V2c	V1, V2c Read Community	Community string	No	Use a community string match for authentication
	V1, V2c Write/Read Community	Community string	No	Use a community string match for authentication
SNMP V3	No-Auth	No	No	Use account with admin or user to access objects
	MD5 or SHA	Authentication based on MD5 or SHA	No	Provides authentication based on HMAC-MD5, or HMAC-SHA algorithms. 8-character passwords are the minimum requirement for authentication.
	MD5 or SHA	Authentication based on MD5 or SHA	Data encryption key	Provides authentication based on HMAC-MD5 or HMAC-SHA algorithms, and data encryption key. 8-character passwords and a data encryption key are the minimum requirements for authentication and encryption.

The following parameters can be configured on the **SNMP Agent** page. A more detailed explanation of each parameter is given below:

SNMP Agent

Enable

Disable

Remote management

Disable

Read community

public

Write community

private

SNMP agent version

V1, V2c

Admin authentication type

No Auth

Admin privacy type

Disable

Privacy key

Private MIB information

enterprise.8691.15.7

Device object ID

enterprise.8691.15.7

Submit

Enable

Setting	Description	Factory Default
Enable	Enables SNMP Agent	Disable
Disable	Disables SNMP Agent	

Remote Management

Setting	Description	Factory Default
Enable	Allow remote management via SNMP agent	Disable
Disable	Disallow remote management via SNMP agent	

Read community (for V1, V2c)

Setting	Description	Factory Default
V1, V2c Read Community	Use a community string match with a maximum of 31 characters for authentication. This means that the SNMP agent can access all objects with read-only permissions using this community string.	public

Write community (for V1, V2c)

Setting	Description	Factory Default
V1, V2c Read /Write Community	Use a community string match with a maximum of 31 characters for authentication. This means that the SNMP agent can accesses all objects with read/write permissions using this community string.	private

SNMP agent version

Setting	Description	Factory Default
V1, V2c, V3, or V1, V2c, or V3 only	Select the SNMP protocol version used to manage the switch.	V1, V2c

Admin auth type (for V1, V2c, V3, and V3 only)

Setting	Description	Factory Default
No Auth	Use admin account to access objects. No authentication	No Auth
MD5	Provide authentication based on the HMAC-MD5 algorithms. 8-character passwords are the minimum requirement for authentication.	
SHA	Provides authentication based on HMAC-SHA algorithms. 8-character passwords are the minimum requirement for authentication.	

Admin private key (for V1, V2c, V3, and V3 only)

Setting	Description	Factory Default
Disable	No data encryption	Disable
DES	DES-based data encryption	
AES	AES-based data encryption	

Private key

A data encryption key is the minimum requirement for data encryption (maximum of 63 characters)


Private MIB Information Device Object ID

Also known as the **OID**, this is the AWK-3131A-RTG's enterprise value and is a fixed value.

Mobile IP Settings

The mobile IP technology enables the AWK-3131A-RTG to roam between Layer 3 networks with a roaming break time less than 50 ms. When the AWK-3131A-RTG is in client/client router mode, it is a mobile node (MN) that is able to roam across different subnets without changing its IP address.

Mobile IP Topology Example:

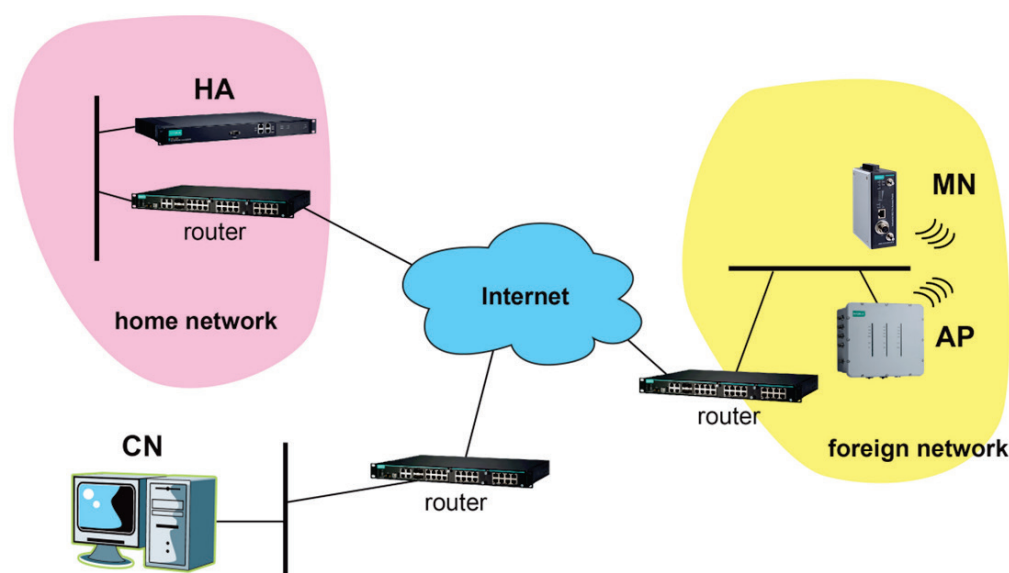

Terminology	Description
Mobile Node (MN)	A host or router that changes its location from one network to another.
Home network	The network within which the MN receives its identifying IP address (home address)
Home address	The IP address assigned to the MN within its home network
Foreign network	The network in which an MN is operating when away from its home network
Home agent (HA)	A router on the home network that provides services to the MN. The home agent intercepts packets sent to the MN within the home network, encapsulates them, and then tunnels them to the MN.
Correspondent Node (CN)	A peer with which a mobile node is communicating
Co-located Care-of Address (CCoA)	The new IP address of the MN when operating on a foreign network.
Binding	The association of the home address with a CCoA

Mobile IP Settings (Client mode only)

Mobile IP

☒ Enable

Subnet Binding

☒ Enable

No.	Enable	Subnet	Netmask
1	<input type="checkbox"/>	0.0.0.0	255.255.255.0
2	<input type="checkbox"/>	0.0.0.0	255.255.255.0
3	<input type="checkbox"/>	0.0.0.0	255.255.255.0
4	<input type="checkbox"/>	0.0.0.0	255.255.255.0
5	<input type="checkbox"/>	0.0.0.0	255.255.255.0
6	<input type="checkbox"/>	0.0.0.0	255.255.255.0
7	<input type="checkbox"/>	0.0.0.0	255.255.255.0
8	<input type="checkbox"/>	0.0.0.0	255.255.255.0

Submit

Setting	Description	Factory Default
Mobile IP	Enable/disable mobile IP capability of the client (mobile node) for L3 controller based roaming	Disable
Subnet Binding	Define a subnet of devices connected behind the client (MN) so that data will be forwarded to the corresponding device subnets. Proper IP planning is required to avoid configuring the subnet binding IP to limit access to the AWK.	Disable

Note that when the Mobile IP is enabled, the corresponding AP and WAC (HA) controller will also need to be configured properly (with 50 ms roaming enabled) to ensure correct operation of the L3 roaming network.

Link Fault Pass-Through (For Client Mode Only)

This function means if Ethernet port is link down, wireless connection will be forced to disconnect. Once Ethernet link is recovered, AWK will try to connect to AP.

If wireless is disconnected, AWK restarts auto-negotiation on Ethernet port but always stays in the link failure state. Once the wireless connection is recovered, AWK will try to recover the Ethernet link.

System log will indicate the link fault pass-through events in addition to the original link up/down events.

Link Fault Pass-Through (for Client mode only)

Link Fault Pass-Through

☒ Enable
 ☐ Disable

Check LAN Port

LAN 1 ▼

Submit

Link Fault Pass-Through

Setting	Description	Factory Default
Enable	Enables the Link Fault Pass-Through function	Disable
Disable	Disables the Link Fault Pass-Through function	

Auto Warning Settings

Since industrial-grade devices are often located at the endpoints of a system, these devices will not always know what is happening elsewhere on the network. This means that these devices, including wireless APs or clients, must provide system maintainers with real-time alarm messages. Even when system administrators are out of the control room for an extended period, they can still be informed of the status of devices almost instantaneously when exceptions occur.

In addition to logging these events, the AWK-3131A-RTG supports different approaches to warn engineers automatically, such as SNMP trap and e-mail. It also supports two digital inputs to integrate sensors into your system to automate alarms by email.

System Log

System Log Event Types

Detail information for grouped events is shown in the following table. You can check the box for **Enable log** to enable the grouped events. All default values are enabled (checked). The log for system events can be seen in **Status > System Log**.

System Log Event Types	
Event Group	Enable Log
System-related events	<input checked="" type="checkbox"/>
Network-related events	<input checked="" type="checkbox"/>
Config-related events	<input checked="" type="checkbox"/>
Power events	<input checked="" type="checkbox"/>
DI events	<input checked="" type="checkbox"/>

Submit

System-related events	Event is triggered when...
System restart (warm start)	The AWK-3131A-RTG is rebooted, such as when its settings are changed (IP address, subnet mask, etc.).

Network-related events	Event is triggered when...
LAN link on	The LAN port is connected to a device or network.
LAN link off	The port is disconnected (e.g., the cable is pulled out, or the opposing device shuts down).
Client joined/ left (for AP mode)	A wireless client is associated or disassociated.
WLAN connected to AP (for Client mode)	The AWK-3131A-RTG is associated with an AP.
WLAN disconnected (for Client mode)	The AWK-3131A-RTG is disassociated from an AP.

Config-related events	Event is triggered when...
Configuration Changed	A configuration item has been changed.
Configuration file import via Web Console	The configuration file is imported to the AWK-3131A-RTG.
Console authentication failure	An incorrect password is entered.
Firmware upgraded	The AWK-3131A-RTG's firmware is updated.

Power events	Event is triggered when...
Power 1/2 transition (On -> Off)	The AWK-3131A-RTG is powered down in PWR1/2.
PoE transition (On -> Off)	The AWK-3131A-RTG is powered down in PoE.
Power 1/2 transition (Off -> On)	The AWK-3131A-RTG is powered via PWR1/2.
PoE transition (Off -> On)	The AWK-3131A-RTG is powered via PoE.

DI events	Event is triggered when...
DI0/DI1 (On -> Off)	Digital Input 0/1 is triggered by on-to-off transition.
DI0/DI1 (Off -> On)	Digital Input 0/1 is triggered by off-to-on transition.

Syslog

This function provides the event logs for the Syslog server. The function supports up to three configurable Syslog servers and Syslog server UDP port numbers. When an event occurs, the event will be sent as a Syslog UDP packet to the specified Syslog servers.

Syslog Event Types

Detail information for the grouped events is shown in the following table. You can check the box for **Enable log** to enable the grouped events. All default values are enabled (checked). Details for each event group can be found on the "System log Event Types" table on page 3-31.

Syslog Event Types

Event Group	Enable Log
System-related events	<input checked="" type="checkbox"/>
Network-related events	<input checked="" type="checkbox"/>
Config-related events	<input checked="" type="checkbox"/>
Power events	<input checked="" type="checkbox"/>
DI events	<input checked="" type="checkbox"/>

Submit



NOTE

The RSSI report events option is only supported in client mode.

Syslog Server Settings

You can configure the parameters for your Syslog servers in this page.

Syslog Server Settings

Syslog server 1

Syslog port

514

Syslog server 2

Syslog port

514

Syslog server 3

Syslog port

514

Syslog server 1/ 2/ 3

Setting	Description	Factory Default
IP address	Enter the IP address of the 1st/ 2nd/ 3rd Syslog Server	None

Syslog port

Setting	Description	Factory Default
Port destination (1 to 65535)	Enter the UDP port of the corresponding Syslog server	514

E-mail

E-mail Event Types

Check the box for **Active** to enable the event items. All default values are deactivated (unchecked). Details for each event item can be found on the "[System log Event Types](#)" table.

E-mail Event Types	
Event	<input type="checkbox"/> Active
Cold start	<input type="checkbox"/>
Warm start	<input type="checkbox"/>
Power 1 transition (On-->Off)	<input type="checkbox"/>
Power 1 transition (Off-->On)	<input type="checkbox"/>
Power 2 transition (On-->Off)	<input type="checkbox"/>
Power 2 transition (Off-->On)	<input type="checkbox"/>
PoE transition (On-->Off)	<input type="checkbox"/>
PoE transition (Off-->On)	<input type="checkbox"/>
Configuration changed	<input type="checkbox"/>
Console authentication failure	<input type="checkbox"/>
DI 0 transition (On-->Off)	<input type="checkbox"/>
DI 0 transition (Off-->On)	<input type="checkbox"/>
DI 1 transition (On-->Off)	<input type="checkbox"/>
DI 1 transition (Off-->On)	<input type="checkbox"/>
LAN link on	<input type="checkbox"/>
LAN link off	<input type="checkbox"/>

E-mail Server Settings

You can set up to 4 e-mail addresses to receive alarm emails from the AWK-3131A-RTG. The following parameters can be configured on the **E-mail Server Settings** page. In addition, a **Send Test Mail** button can be used to test whether the Mail server and e-mail addresses work well. More detailed explanations about these parameters are given after the following figure.

E-mail Server Settings	
Mail server (SMTP)	<input type="text"/>
User name	<input type="text"/>
Password	<input type="password"/>
From e-mail address	<input type="text"/>
To e-mail address 1	<input type="text"/>
To e-mail address 2	<input type="text"/>
To e-mail address 3	<input type="text"/>
To e-mail address 4	<input type="text"/>

Mail server (SMTP)

Setting	Description	Factory Default
IP address	The IP Address of your email server.	None

User name & Password

Setting	Description	Factory Default
	User name and password used in the SMTP server	None

From e-mail address

Setting	Description	Factory Default
Max. 63 characters	Enter the administrator's e-mail address which will be shown in the "From" field of a warning e-mail.	None

To E-mail address 1/ 2/ 3/ 4

Setting	Description	Factory Default
Max. 63 characters	Enter the receivers' e-mail addresses.	None

Traps

Traps can be used to signal abnormal conditions (notifications) to a management station. This trap-driven notification can make your network more efficient.

Because a management station usually takes care of a large number of devices that have a large number of objects, it will be overloading for the management station to poll or send requests to query every object on every device. It would be better if the managed device agent could notify the management station by sending a message known as a trap for the event.

Trap Event Types

Trap Event Types	
Event	<input type="checkbox"/> Active
Cold start	<input type="checkbox"/>
Warm start	<input type="checkbox"/>
Power 1 transition (On-->Off)	<input type="checkbox"/>
Power 1 transition (Off-->On)	<input type="checkbox"/>
Power 2 transition (On-->Off)	<input type="checkbox"/>
Power 2 transition (Off-->On)	<input type="checkbox"/>
PoE transition (On-->Off)	<input type="checkbox"/>
PoE transition (Off-->On)	<input type="checkbox"/>
Configuration changed	<input type="checkbox"/>
Console authentication failure	<input type="checkbox"/>
DI 0 transition (On-->Off)	<input type="checkbox"/>
DI 0 transition (Off-->On)	<input type="checkbox"/>
DI 1 transition (On-->Off)	<input type="checkbox"/>
DI 1 transition (Off-->On)	<input type="checkbox"/>
LAN link on	<input type="checkbox"/>
LAN link off	<input type="checkbox"/>

Submit

SNMP Trap Receiver Settings

SNMP traps are defined in SMiv1 MIBs (SNMPv1) and SMiv2 MIBs (SNMPv2c). The two styles are basically equivalent, and it is possible to convert between the two. You can set the parameters for SNMP trap receivers through the web page.

SNMP Trap Receiver Settings	
SNMP alert type	Trap ▾
1st Trap version	V1 ▾
1st Trap server IP/name	<input type="text"/>
1st Trap community	<input type="text" value="alert"/>
2nd Trap version	V1 ▾
2nd Trap server IP/name	<input type="text"/>
2nd Trap community	<input type="text" value="alert"/>
3rd Trap version	V1 ▾
3rd Trap server IP/name	<input type="text"/>
3rd Trap community	<input type="text" value="alert"/>

Submit

1st / 2nd Trap version

Setting	Description	Factory Default
V1	SNMP trap defined in SNMPv1	V1
V2	SNMP trap defined in SNMPv2	

1st / 2nd Trap server IP/name

Setting	Description	Factory Default
IP address or host name	Enter the IP address or name of the trap server used by your network.	None

1st / 2nd Trap community

Setting	Description	Factory Default
Max. of 31 characters	Use a community string match with a maximum of 31 characters for authentication.	alert

Status

Wireless Status

The status for **802.11 info** parameters, such as Operation mode and Channel, are shown on the **Wireless Status** page. The status will refresh every 5 seconds if the **Auto refresh** box is checked.

Depending on the operation mode, certain **802.11 info** values may not be displayed. For example, the **Current BSSID** and **Signal strength** parameters are not available in the **AP** mode.

It is helpful to use the continuously updated information on this page, such as **Signal strength**, to monitor the signal strength of the AWK-3131A-RTG in Client mode.

The transmission power indicated is the current transmission power being updated periodically.

Wireless Status

☒ Auto refresh

Show status of WLAN (SSID: MOXA) ▼

802.11 Info

Operation mode	AP
Channel	6
RF type	B/G/N Mixed
Channel width	20MHz
SSID	MOXA
MAC	06:90:E8:00:05:10
Security mode	OPEN
Current BSSID	06:90:E8:00:05:10
Signal strength/Noise Floor	N/A
RSSI	0
Transmission rate	Auto
Maximum transmission power	12 dBm (-1 dBm/MHz)

Associated Client List (For AP Mode Only)

Associated Client List shows all the clients that are currently associated to a particular AWK-3131A-RTG. You can click **Select all** to select all the content in the list for further editing. You can click **Refresh** to refresh the list.

Associated Client List

1. <00:13:ce:e1:ee:ef>

Select all

Refresh

DHCP Client List

The DHCP Client List shows all the clients that require and have successfully received IP assignments. You can click the **Refresh** button to refresh the list.

DHCP Client List

	MAC	IP
1.	00:13:ce:e1:ee:ef	192.168.127.2

Select all

Refresh

You can press **Select all** button to select all content in the list for further editing.

MAC

IP

1. 00:13:ce:e1:ee:ef 192.168.127.2

Select all

Refresh

Cut

Copy

Paste

Select All

Print

System Log

Triggered events are recorded in System Log. You can export the log contents to an available viewer by clicking **Export Log**. You can use the **Clear Log** button to clear the log contents and the **Refresh** button to refresh the log.

System Log

(116) 2008/06/18,20h:46m:50s Power 1 transition (Off -> On)
(117) 2008/06/18,20h:46m:50s LAN link on
(118) 2008/06/18,21h:17m:01s System restart
(119) 2008/06/18,21h:17m:10s Power 1 transition (Off -> On)
(120) 2008/06/18,21h:17m:10s LAN link on
(121) 2008/06/18,21h:19m:55s System restart
(122) 2008/06/18,21h:20m:04s Power 1 transition (Off -> On)
(123) 2008/06/18,21h:20m:04s LAN link on
(124) 2008/06/18,21h:20m:21s Client 00:13:CE:E1:EE:EF joined
(125) 2008/06/18,21h:21m:31s Client 00:13:CE:E1:EE:EF joined
(126) 2008/06/18,21h:26m:05s System restart
(127) 2008/06/18,21h:26m:14s Power 1 transition (Off -> On)
(128) 2008/06/18,21h:26m:14s LAN link on
(129) 2008/06/18,21h:26m:18s Client 00:13:CE:E1:EE:EF joined
(130) 2008/06/18,21h:26m:33s Client 00:13:CE:E1:EE:EF joined
(131) 2008/06/18,21h:27m:22s Client 00:13:CE:E1:EE:EF leaved
(132) 2008/06/18,21h:28m:22s Client 00:13:CE:E1:EE:EF joined
(133) 2008/06/18,21h:28m:51s Client 00:13:CE:E1:EE:EF joined

Export Log

Clear Log

Refresh

Relay Status

The status of user-configurable events can be found under Relay Status. The status will refresh every 5 seconds if the **Auto refresh** box is checked.

If an event is triggered, it will be noted on this list. System administrators can click **Acknowledge Event** when they have acknowledged the event and addressed it.

Relay Status

☒ Auto refresh

Relay Status		
Power 1 transition (On-->Off)	---	<div>Acknowledge Event</div>
Power 2 transition (On-->Off)	---	<div>Acknowledge Event</div>
PoE transition (On-->Off)	---	<div>Acknowledge Event</div>
DI 0 transition (On-->Off)	---	<div>Acknowledge Event</div>
DI 0 transition (Off-->On)	---	<div>Acknowledge Event</div>
DI 1 transition (On-->Off)	---	<div>Acknowledge Event</div>
DI 1 transition (Off-->On)	---	<div>Acknowledge Event</div>
LAN link on	---	<div>Acknowledge Event</div>
LAN link off	---	<div>Acknowledge Event</div>

DI and Power Status

The status of power inputs and digital inputs is shown here. The status will refresh every 5 seconds if the **Auto refresh** box is checked.

DI and Power Status

☒ Auto refresh

Input Status	On / Off
Power 1 status	On
Power 2 status	Off
PoE status	Off
DI 0 status	Off
DI 1 status	Off

AeroLink Protection Status (For Client Mode Only)

After enabling AeroLink Protection from the Advanced WLAN Setup panel, the following table shows the current state of the AeroLink Protection for easier diagnosis.

AeroLink Protection Status	
<input checked="" type="checkbox"/> Auto Update	
AeroLink Protection Status	
Current state	N/A (Init/Discover/Idle/Nego/Backup/Active/Change)

An AeroLink Protection member could be in 1 or 7 different states:

Initiation State (Init): Initiates the AeroLink Protection Protocol.

Discovering State (Discover): Discovers other AeroLink Protection members for further negotiation.

Idle State (Idle): Internal protocol checkpoint.

Negotiation State (Nego): Negotiates with other AeroLink Protection members and selects Active node.

Backup State (Backup): After negotiation, this node is assigned as the Backup node. All traffic will pass through the Active node. NOTE: When a node is acting as a Backup node, the STATE LED for the node will blink to advertise this fact to nearby support engineers.

Active State (Active): After negotiation, this node is assigned Active node status, which means that all traffic will pass through that node.

Role Change State (Change): If the Active node is no longer capable of data transmission via the WLAN, the device will enter "change state," which will result in the device going back to Nego state (likely becoming the Backup device since the active link is down).

Routing Table

The Routing Table page shows all routing entries.

Routing Table					
Destination	Gateway	Netmask	Flags	Metric	Iface
192.168.127.0	*	255.255.255.0	U	0	Bridge
224.0.0.0	*	240.0.0.0	U	0	Bridge
default	192.168.127.253	0.0.0.0	UG	0	Bridge

LAN Status

The **LAN Status** page shows the LAN information, which includes speed, duplex, link status, and packet status.

LAN Status					
<input checked="" type="checkbox"/> Auto refresh					
LAN No	Speed	Duplex	Link Status	Tx Packets	Rx Packets
LAN 1	100M	FULL	ON	17447	9975

Maintenance

Maintenance functions provide the administrator with tools to manage the AWK-3131A-RTG and wired/wireless networks.

Console Settings

You can enable or disable access permission for the following consoles: HTTP, HTTPS, Telnet, and SSH connections. For more security, we recommend you only allow access to the two secured consoles, HTTPS and SSH.

Console Settings

HTTP console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTPS console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Telnet console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SSH console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

Submit

Ping

Ping helps to diagnose the integrity of wired or wireless networks. By inputting a node's IP address in the **Destination** field, you can use the **ping** command to make sure it exists and whether or not the access path is available.

Ping

Destination

Ping

If the node and access path are available, you will see that all packets were successfully transmitted with no loss. Otherwise, some, or even all, packets may get lost, as shown in the following figure.

Ping

Destination

Ping

PING 192.168.127.2 (192.168.127.2): 56 data bytes

--- 192.168.127.2 ping statistics ---

4 packets transmitted, 0 packets received, 100% packet loss

Firmware Upgrade

The AWK-3131A-RTG can be enhanced with more value-added functions by installing firmware upgrades. The latest firmware is available at Moxa's download center.

Before running a firmware upgrade, make sure the AWK-3131A-RTG is off-line. Click the **Browse** button to specify the firmware image file and click **Firmware Upgrade and Restart** to start the firmware upgrade. After the progress bar reaches 100%, the AWK-3131A-RTG will reboot itself.

When upgrading your firmware, the AWK-3131A-RTG's other functions are forbidden.

Firmware Upgrade

Select update image

Browse...

Firmware Upgrade and Restart



NOTE

For security reasons, a firmware signature mechanism was added to firmware v1.9. As a result, when uploading firmware in v1.9 or higher, you must upload a ZIP file that includes both the firmware file (.rom) and signature file (.sig).

When upgrading to v1.9, you only need to upload the firmware file (.rom).

If you need to downgrade from v1.9 to an earlier version for any reason, please Moxa Technical Support.



ATTENTION

Please make sure the power source is stable when you upgrade your firmware. An unexpected power breakup may damage your AWK-3131A-RTG.

Config Import/Export

You can back up and restore the AWK-3131A-RTG's configuration with **Config Import** and **Config Export** functions.

In the **Config Import** section, click **Browse** to specify the configuration file and click on the **Config Import** button to begin importing the configuration.

Config Import	
Select configuration file	<input type="button" value="Choose Files"/> No file chosen
<input type="button" value="Config Import"/>	
Config Export	
<input type="button" value="Config Export"/>	

Downloading the Configuration from a TFTP Server

TFTP Import	
TFTP server IP	<input type="text"/>
Configuration path	<input type="text"/>
File name	<input type="text"/>
<input type="button" value="Config Import"/>	
TFTP Export	
<input type="button" value="Config Export"/>	

You can download a configuration file from a TFTP server on to your AWK-3131A-RTG as follows:

1. Start your TFTP server.
2. Copy the AWK-3131A-RTG configuration file to a folder on the TFTP server.
3. On the AWK-3131A-RTG **Config Import** page, input your **TFTP server IP** and **Configuration path**.



NOTE

The configuration path is the path of the configuration file, which is a relative path. If your configuration file is already available in a folder on the TFTP server, you can leave this field blank.

4. Input your configuration **File name** with the filename extension or click on the **Config Import** button to browse to the file.
Once the configuration downloads successful, you will see "TFTP import success" information on the web page.
5. Click **Save** and then **Restart** on the top-right side.

You can also back up or restore the ABC-01 configuration with **Config Import Export**.

The screenshot shows a web interface with two sections. The top section is titled "ABC-01 Import" and contains a button labeled "Import Configuration". The bottom section is titled "ABC-01 Export" and contains a button labeled "Export Configuration".

You can also get the SNMP MIB file by clicking on **MIB Export** in the SNMP MIB file Export section.

The screenshot shows a web interface with a section titled "SNMP MIB file Export" containing a button labeled "MIB Export".

SNMP MIB file for AWK-3131A-RTG is embedded in the device. To export the MIB file, simply click on the "MIB Export" button and save it to your local drive.

Load Factory Default

Use this function to reset the AWK-3131A-RTG and roll all settings back to the factory or customized (using imported configuration file in the **Default Config Import** screen) default values. You can also reset the hardware by pressing the reset button on the bottom panel of the AWK-3131A-RTG.

The screenshot shows a web interface with a section titled "Load Factory Default". Below the title is a green bar with the text "Reset to Factory Default". Below this bar, there is a paragraph of text: "Click **Activate** to reset all settings, including the console password, to the factory default values. The system will be restarted immediately." At the bottom of the section is a button labeled "Activate".

Username/Password

You can change the administration username and password for each of the AWK-3131A-RTG's console managers by using the **Username/Password** function. Before you set up a new password, you must input the current password and reenter the new password for confirmation. For your security, do not use the default password **moxa**, and remember to change the administration password regularly.

The screenshot shows a web interface with a section titled "Username/Password". Below the title, there is a form with the following fields: "Username" (containing the text "admin"), "Current password", "New password", and "Confirm password". There are two "Submit" buttons: one below the "Username" field and one below the "Confirm password" field.

Locate Device

The AP can be identified by a beeping sound and flashing LED when clicking on the “start to locate” button. To stop the beeping, click on the “stop locating” button.

Locate Device (Beeper & LED)

Status: Ready to locate

Start to locate

Misc. Settings

Additional settings to help you manage your AWK-3131A-RTG are available on this page.

Misc. Settings

Reset button

☒ Always enable ☐ Always disable ☐ Disable 'restore to default function' after 60 sec

Submit


Reset button

Setting	Description	Factory Default
Always enable	The AWK-3131A-RTG’s reset button works normally.	Always enable
Always disable	The AWK-3131A-RTG’s reset button will not work.	
Disable 'restore to default function' after 60 sec	The AWK-3131A-RTG’s reset to default function will be inactive 60 seconds after the AWK-3131A-RTG finishes booting up.	

Save Configuration

The following figure shows how the AWK-3131A-RTG stores the setting changes into volatile and non-volatile memory. All data stored in volatile memory will disappear when the AWK-3131A-RTG is shutdown or rebooted unless they are y. Because the AWK-3131A-RTG starts up and initializes with the settings stored in flash memory, all new changes must be saved to flash memory before restarting the AWK-3131A-RTG.

This also means the new changes will not work unless you run either the **Save Configuration** function or the **Restart** function.

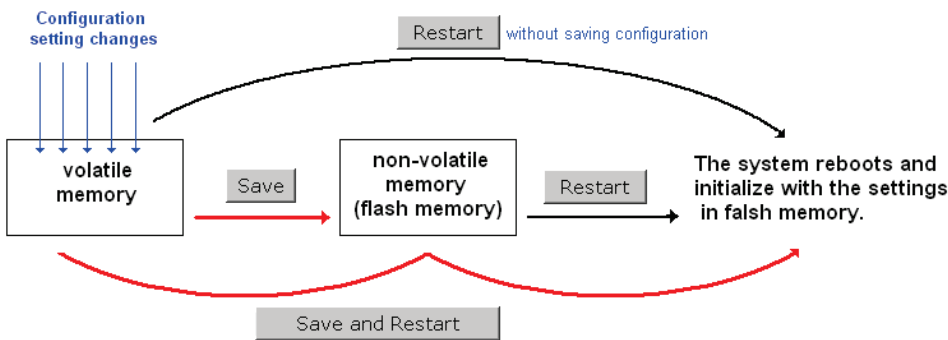

After you click on **Save Configuration** in the left menu box, the following screen will appear. Click **Save** if you wish to update the configuration settings in the flash memory at this time. Alternatively, you may choose to run other functions and put off saving the configuration until later. However, the new setting changes will remain in the non-volatile memory until you save the configurations.

Save Configuration
If you have submitted any configuration changes, you must save the changes and restart the system before they take effect. Click **Save** to save the changes in AWK-3131-RCC-US's memory. Click **Restart** to activate new settings in the navigation panel.

Save

Restart

If you submitted configuration changes, you will find a blinking string in the upper right corner of the screen. After making all your changes, click the **Restart** function in the left menu box. One of two different screens will appear.

**** Click Restart to activate new settings! ****
» Total Solution for Industrial Wireless Networking

If you made changes recently but did not save, you will be given two options. Clicking the **Restart** button here will reboot the AWK-3131A-RTG directly, and all setting changes will be ignored. Clicking the **Save and Restart** button will apply all setting changes and then reboot the AWK-3131A-RTG.

Restart
!!! Warning !!!
Click "Restart" to discard changes and reboot TAP-213-US directly.
Click "Save and Restart" to apply all setting changes and reboot TAP-213-US.

Restart

Save and Restart

If you run the **Restart** function without changing any configurations or saving all your changes, you will see just one **Restart** button on your screen.

Save Configuration
If you have submitted any configuration changes, you must save the changes and restart the system before they take effect. Click **Save** to save the changes in TAP-213-US's memory. Click **Restart** to activate new settings in the navigation panel.

Save

You will not be able to run any of the AWK-3131A-RTG's functions while the system is rebooting.

Logout

Logout helps users disconnect the current HTTP or HTTPS session and go to the Login page. For security reasons, we recommend you logout before quitting the console manager.

Logout
Click **Logout** button to default Login page.

Logout

4. Software Installation and Configuration

Overview


The Wireless Search Utility can be downloaded from the Moxa website at www.moxa.com.

Wireless Search Utility


Installing Wireless Search Utility

Once the Wireless Search Utility is downloaded, run the setup executable to start the installation.


1. Click **Next** in the **Welcome** screen to proceed with the installation.

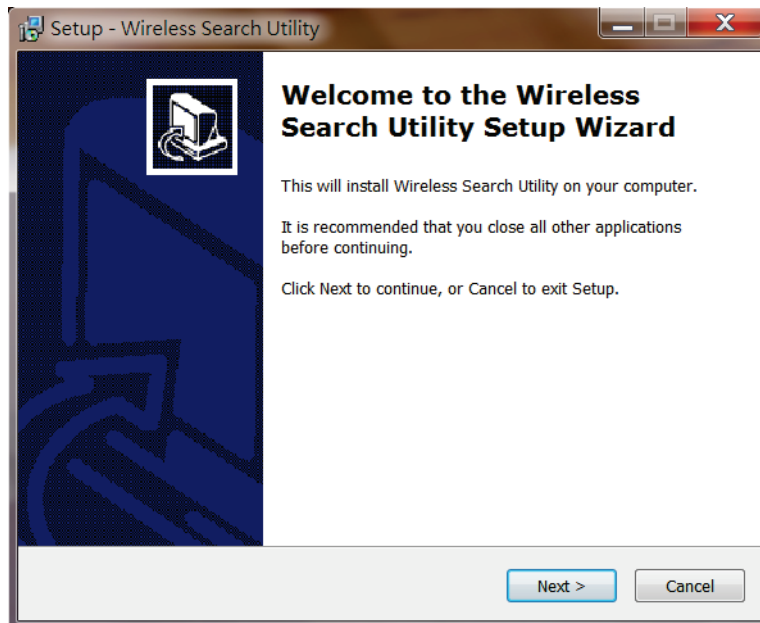


2. Click **Next** to install program files to the default directory, or click **Browse** to select an alternate location.

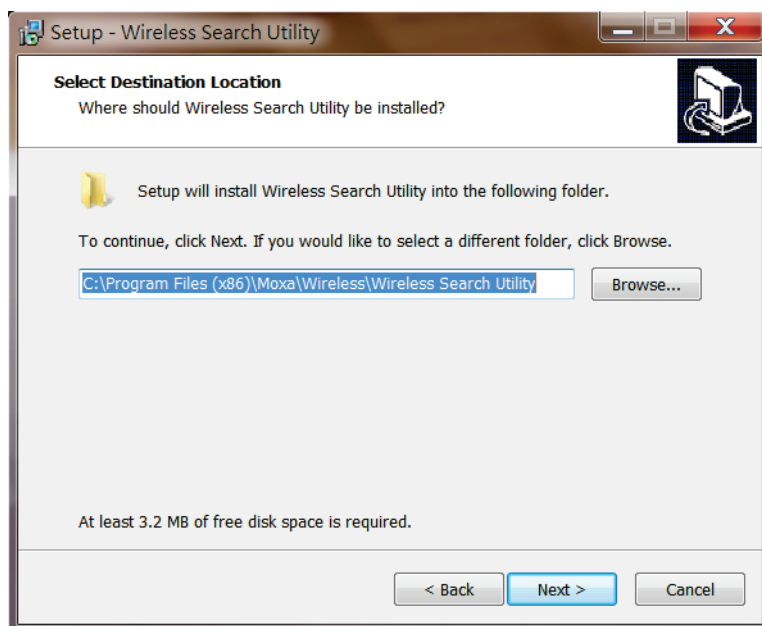


3. Click **Next** to install the program's shortcut files in the default directory, or click **Browse** to select an alternate location.

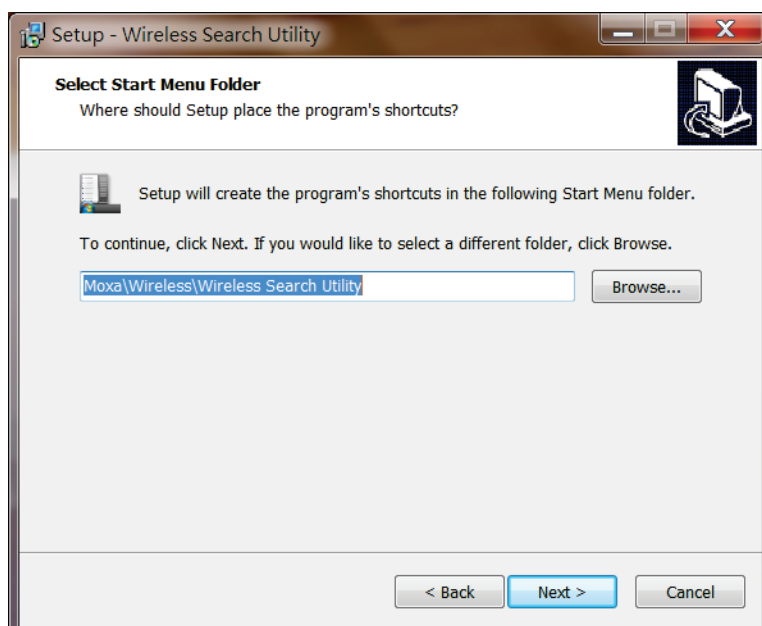

4. Click **Next** to select additional tasks.

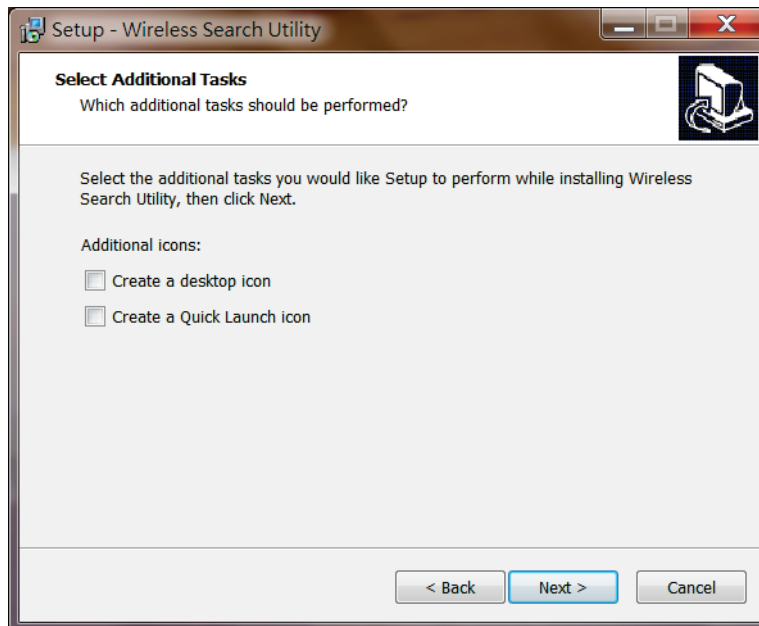


5. Click **Install** to proceed with the installation. The installer then displays a summary of the installation options.

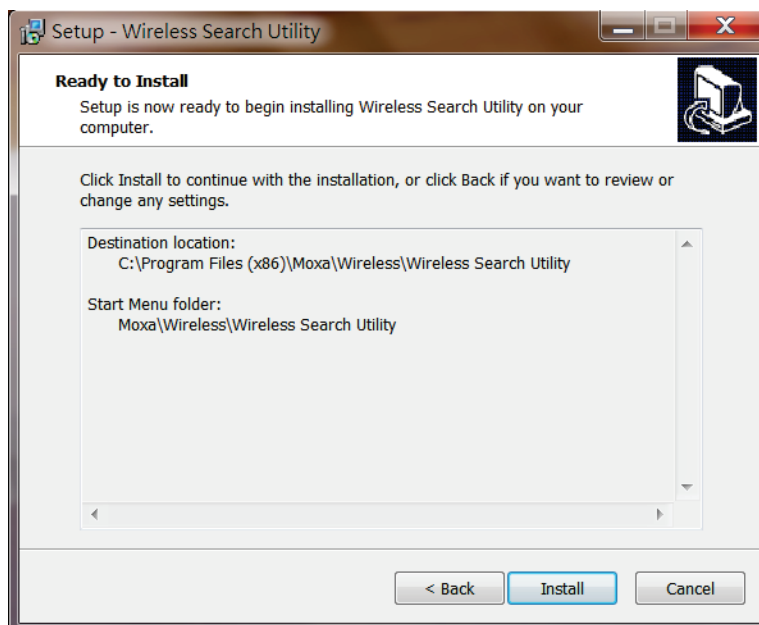

6. Click **Install** to begin the installation. The setup window will report the progress of the installation. To change the installation settings, click **Back** and navigate to the previous screen.


7. Click **Finish** to complete the installation of Wireless Search Utility.

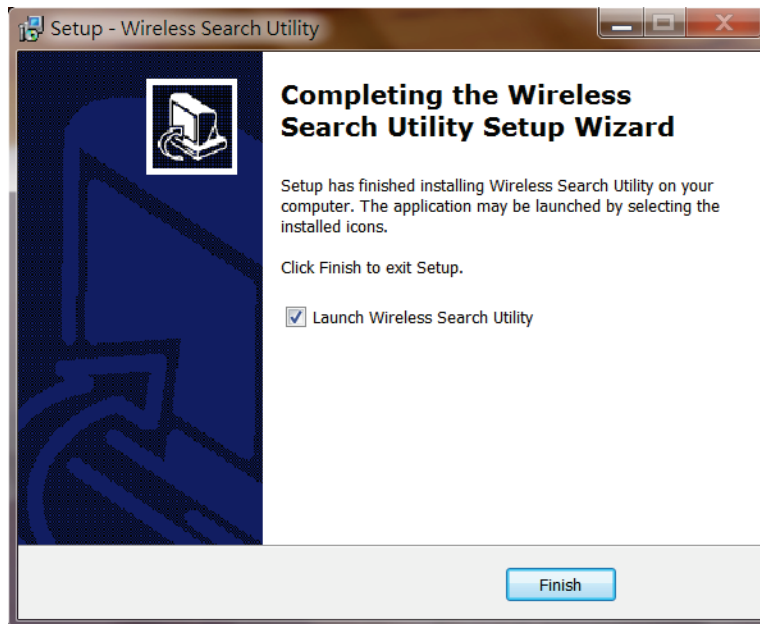


Configuring Wireless Search Utility

The Broadcast Search function is used to locate all AWK-3131A-RTG APs that are connected to the same LAN as your computer. After locating the AWK-3131A-RTG, you will be able to change its IP address. Since the Broadcast Search function searches by UDP packets and not IP address, it doesn't matter if the AWK-3131A-RTG is configured as an AP or Client. In either case, APs and Clients connected to the LAN will be located, regardless of whether or not they are part of the same subnet as the host.


1. Start the **Wireless Search Utility** program. When the Login page appears, select the "Device Search only" option to search for AWKs and to view each AWK's configuration. Select the "Device management" option to assign IPs, upgrade firmware, and locate devices.

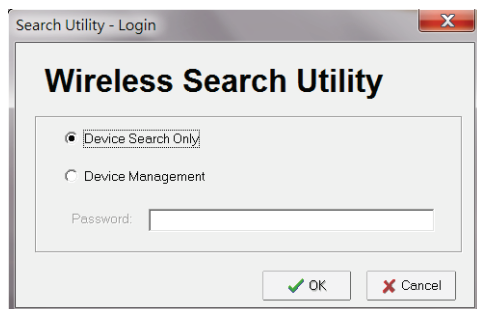


2. Open the Wireless Search Utility and then click the **Search** icon.

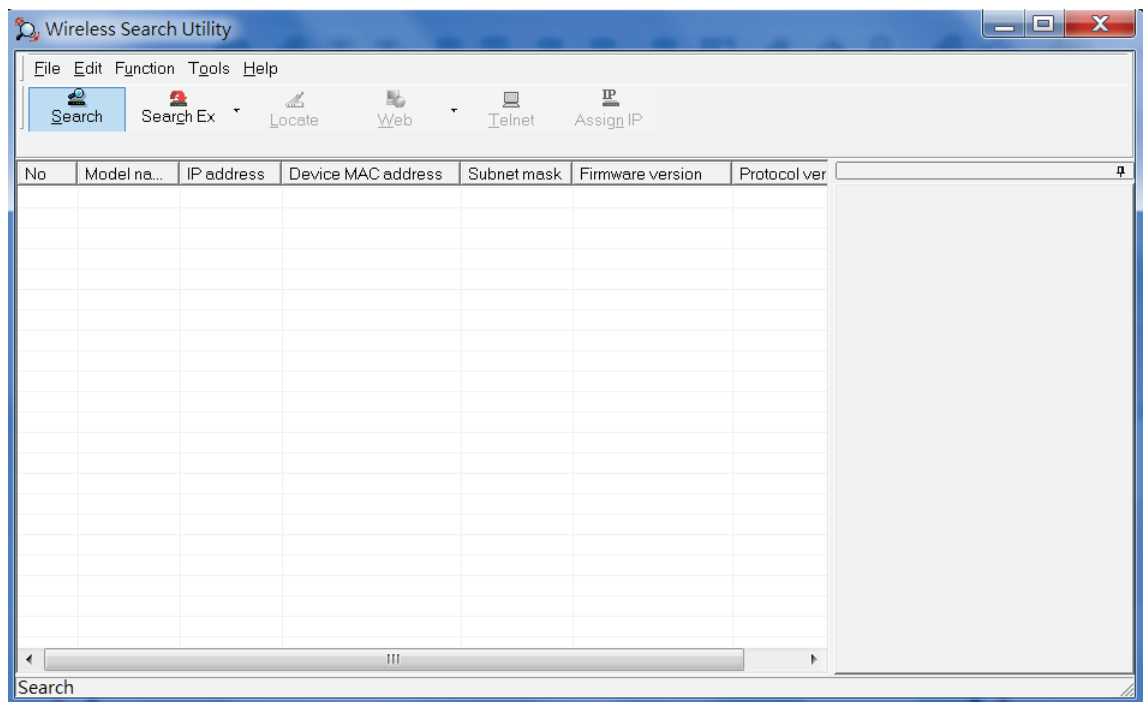


3. The "Searching" window indicates the progress of the search. When the search is complete, all AWKs that were located will be displayed in the Wireless Search Utility window.

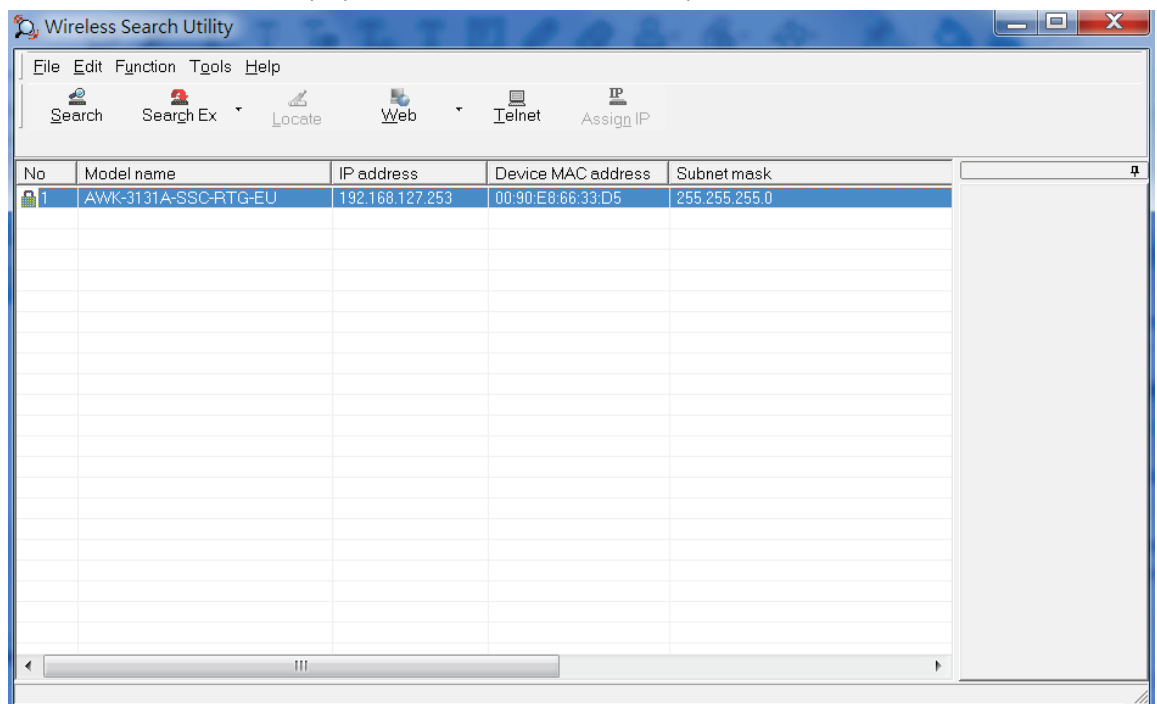

- Click **Locate** to cause the selected device to beep.

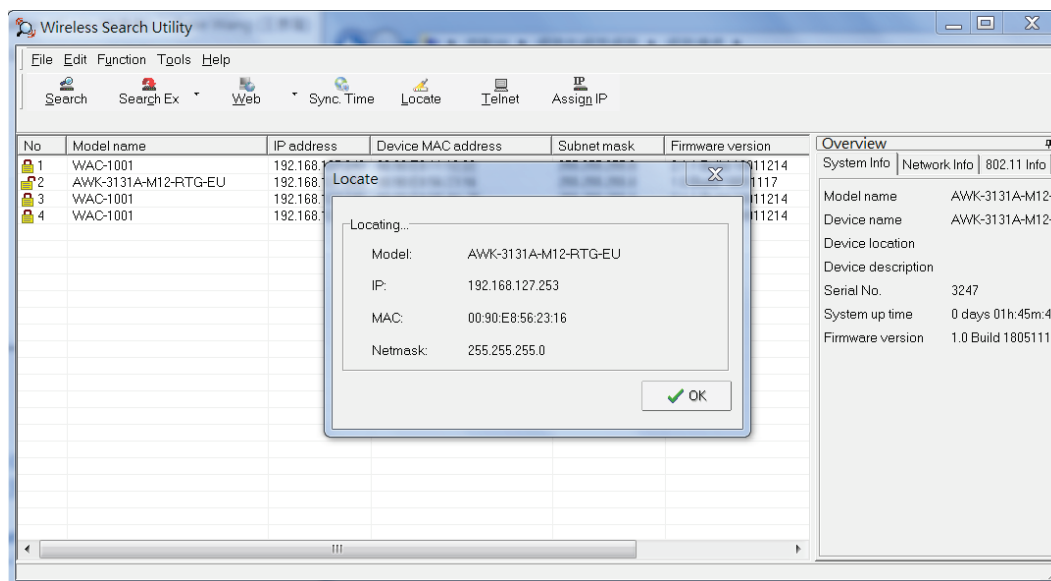

- Make sure your AWK is **unlocked** before using the search utility's icons setting. The AWK will unlock automatically if the password is set to the default. Otherwise you must enter the new password manually.
- Go to **Tools > Login Options** to manage and unlock additional AWKs.

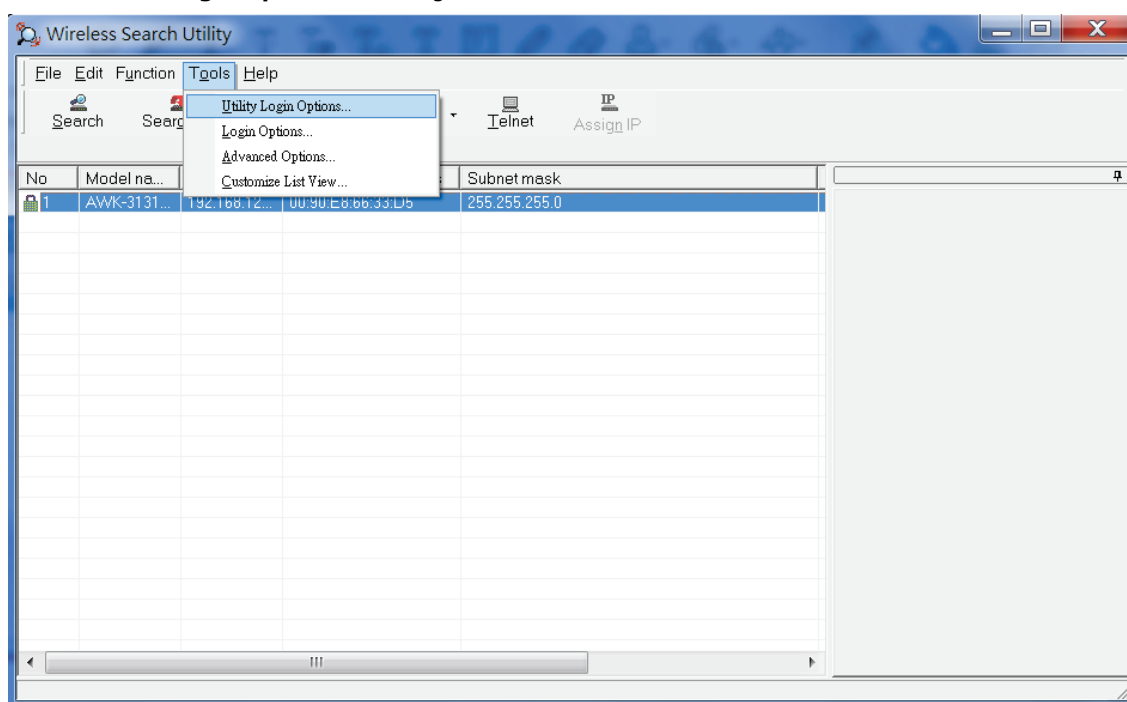

- Use the scroll down list to select the MAC addresses of those AWKs you would like to manage, and then click **Add**. Key in the password for the AWK device and then click **OK** to save. If you return to the search page and search for the AWK again, you will find that the AWK will unlock automatically.




ATTENTION


For security purposes, we suggest you can change the wireless search utility login password instead of using the default.

Last IP	Device MAC address	Username	Password
Default	*	admin	root


To modify the configuration of the highlighted AWK, click on the Web icon to open the web console. This will take you to the web console, where you can make all configuration changes. Refer to Chapter 3, "Using the Web Console," for information on how to use the web console.

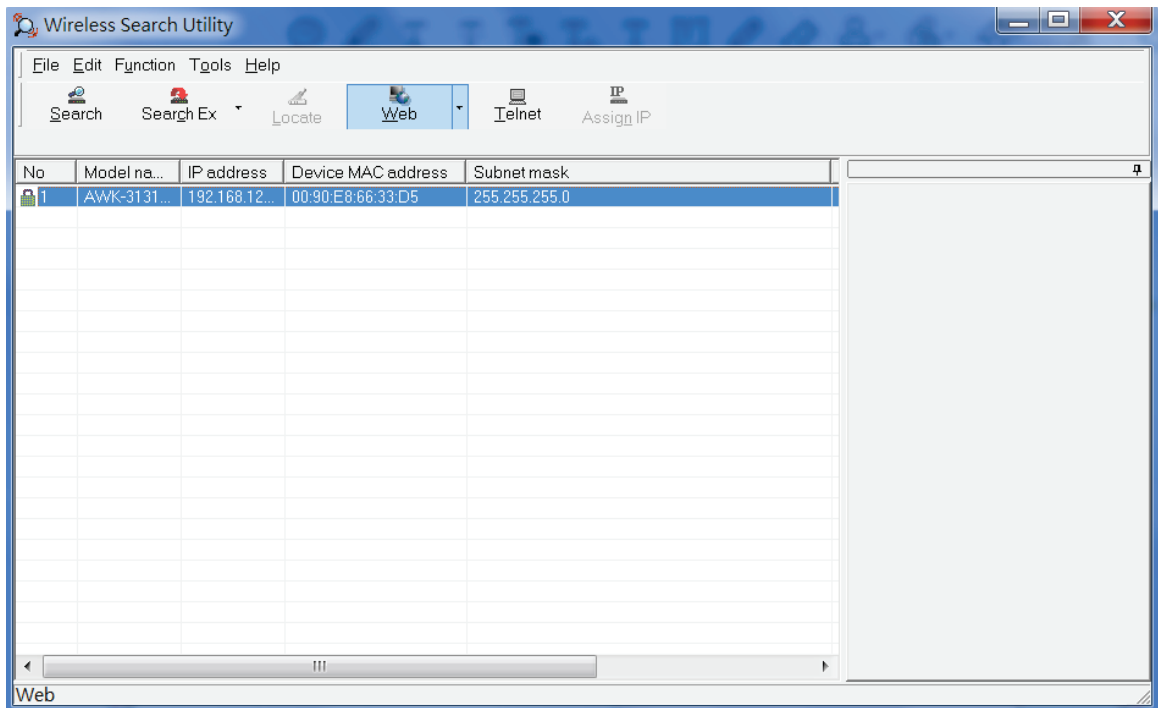

Click on **Telnet** if you would like to use telnet to configure your AWKs.

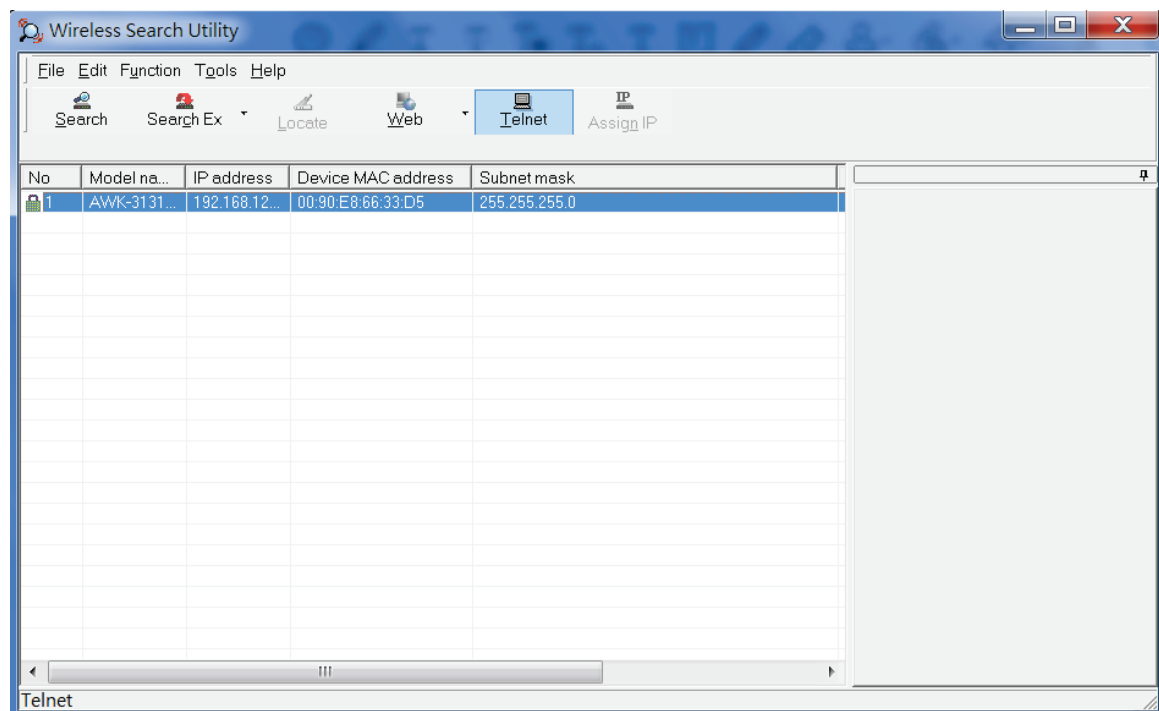


Click **Assign IP** to change the IP setting.

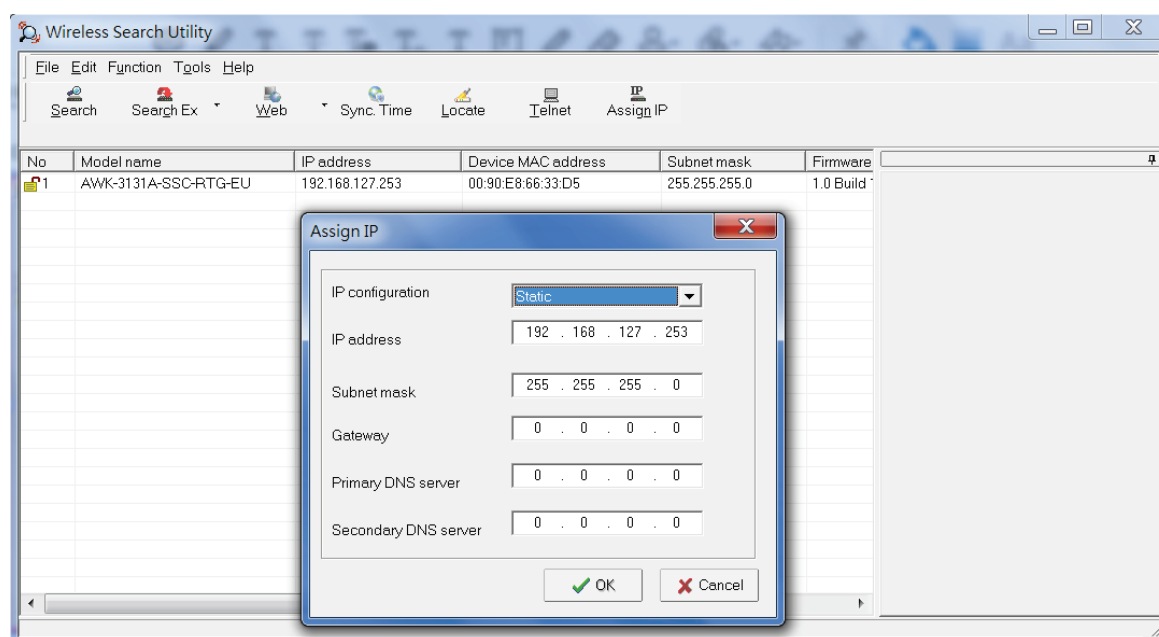

The three advanced options—**Search**, **Connection**, and **Miscellaneous**—are explained below:

Search


- **Retry count (default=5):** Indicates how many times the search will be retried automatically.
- **Retry interval (ms):** The time elapsed between retries.

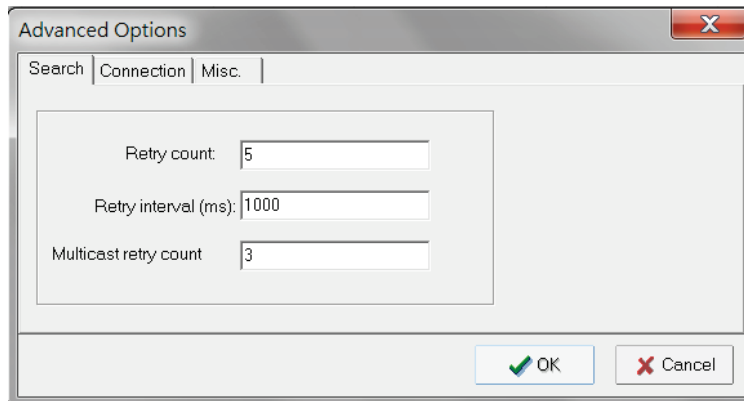

The image shows the 'Advanced Options' dialog box with the 'Search' tab selected. It contains three input fields: 'Retry count' with a value of 5, 'Retry interval (ms)' with a value of 1000, and 'Multicast retry count' with a value of 3. At the bottom right are 'OK' and 'Cancel' buttons.

Connection


- **Connection timeout (secs):** Use this option to set the waiting time for the **Default Login**, **Locate**, **Assign IP**, **Upload Firmware**, and **Unlock** to complete.
- **Upgrade timeout (secs):** Use this option to set the waiting time for the connection to disconnect while the firmware is upgrading. Use this option to set the waiting time for the Firmware to write to flash.

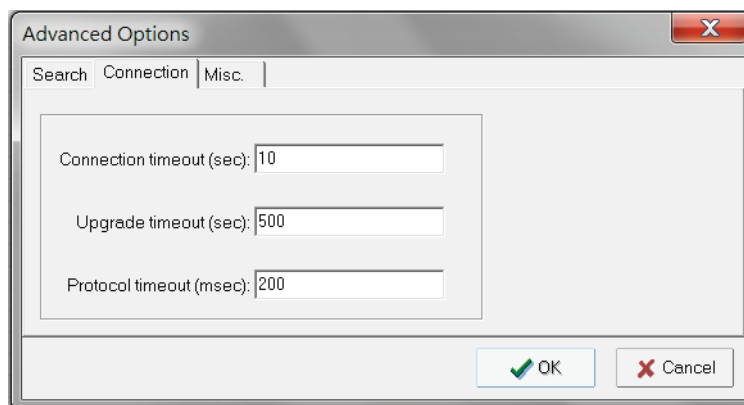

The image shows the 'Advanced Options' dialog box with the 'Connection' tab selected. It contains three input fields: 'Connection timeout (sec)' with a value of 10, 'Upgrade timeout (sec)' with a value of 500, and 'Protocol timeout (msec)' with a value of 200. At the bottom right are 'OK' and 'Cancel' buttons.

Misc.

Search on start: Checkmark this box if you would like the search function to start searching for devices after you log in to the Wireless Search Utility.

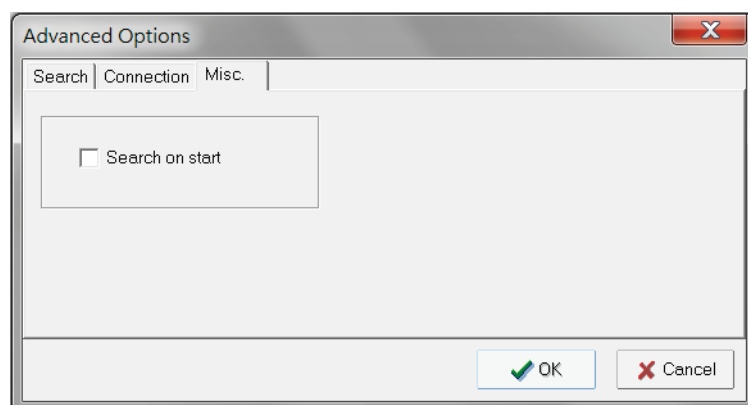

The image shows the 'Advanced Options' dialog box with the 'Misc.' tab selected. It contains a single checkbox labeled 'Search on start', which is currently unchecked. At the bottom right are 'OK' and 'Cancel' buttons.

5. Using Other Consoles

This chapter explains how to access the AWK-3131A-RTG for the first time. In addition to HTTP access, there are four ways to access the AWK-3131A-RTG: USB console, Telnet console, SSH console, and HTTPS console. The USB console connection method, which requires using a short USB cable to connect the AWK-3131A-RTG to a PC's COM port, can be used if you do not know the AWK-3131A-RTG's IP address. The other consoles can be used to access the AWK-3131A-RTG over an Ethernet LAN, or over the Internet.

USB Console Configuration (115200, None, 8, 1, VT100)

The serial console connection method, which requires using a short serial cable to connect the AWK-3131A-RTG to a PC's COM port, can be used if you do not know the AWK-3131A-RTG's IP address. It is also convenient to use USB console configurations when you cannot access the AWK-3131A-RTG over Ethernet LAN, such as in the case of LAN cable disconnections or broadcast storming over the LAN.



ATTENTION

Do not use the RS-232 console manager when the AWK-3131A-RTG is powered at reversed voltage (ex. -48 VDC), even though reverse voltage protection is supported.

If you need to connect the RS-232 console at reversed voltage, Moxa's TCC-82 isolator is your best solution.




NOTE


We recommend using the **Moxa PComm (Lite)** Terminal Emulator, which is available for download at: http://www.moxa.com/product/download_pcomm-lite_info.htm.

Before running PComm Terminal Emulator, use a RJ45 to DB9-F (or RJ45 to DB25-F) cable to connect the AWK-3131A-RTG's RS-232 console port to your PC's COM port (generally COM1 or COM2, depending on how your system is set up). After installing PComm Terminal Emulator, take the following steps to access the RS-232 console utility.


1. From the Windows desktop, open the Start menu and run the **PComm Terminal Emulator** from the PComm (Lite) group.
2. In the **Port Manager** menu, select **Open** to open a new connection.

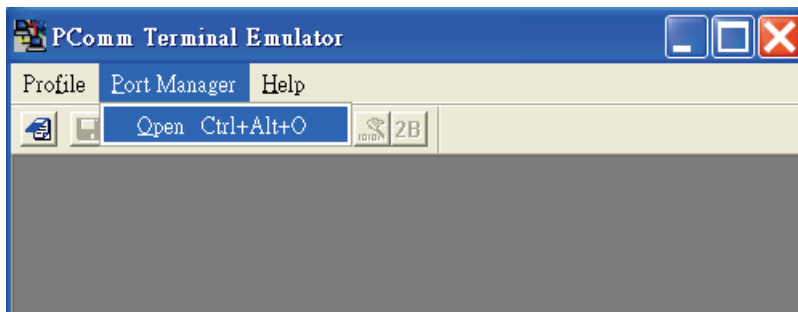


- The **Communication Parameter** page of the Property window opens. Select the appropriate COM port for Console Connection, **115200** for Baud Rate, **8** for Data Bits, **None** for Parity, and **1** for Stop Bits. Click on the **Terminal** tab, and select **VT100 (or ANSI)** for Terminal Type. Click on **OK** to continue.

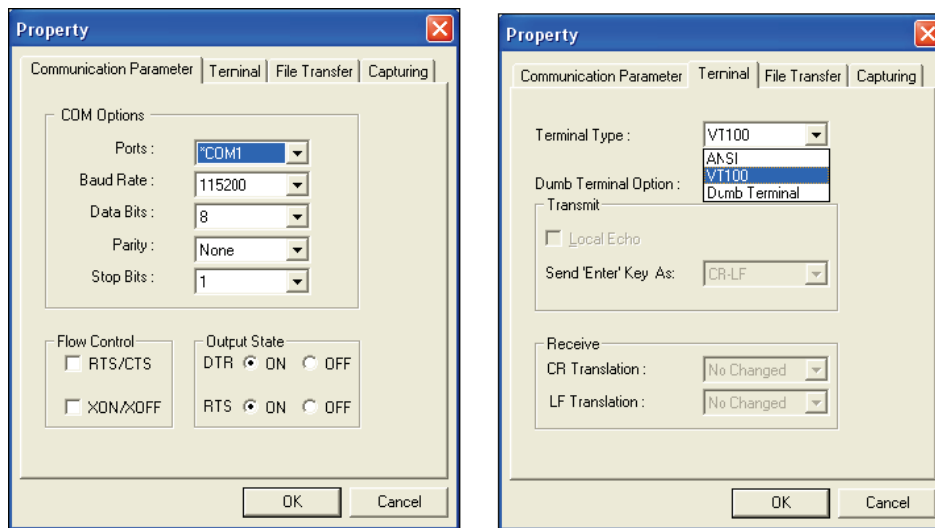

- The Console login screen will appear. Log into the USB console with the login name (default: **admin**) and password (default: **moxa**, if no new password is set).

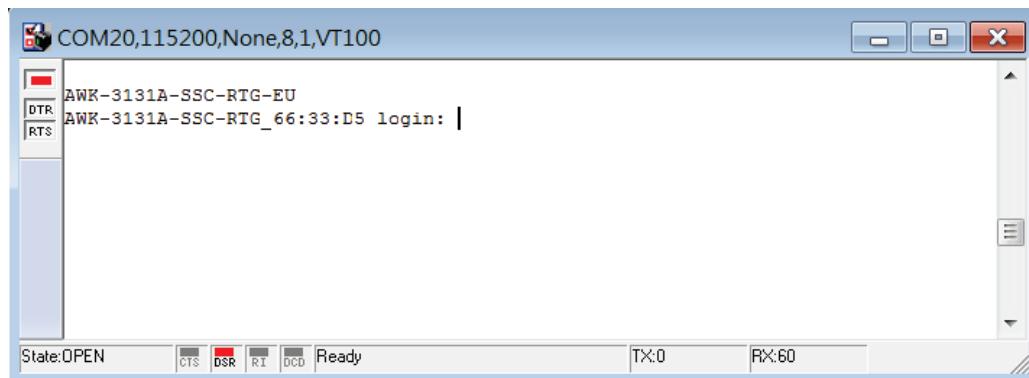

- The AWK-3131A-RTG's device information and Main Menu will be displayed. Please follow the description on screen and select the administration option you wish to perform.

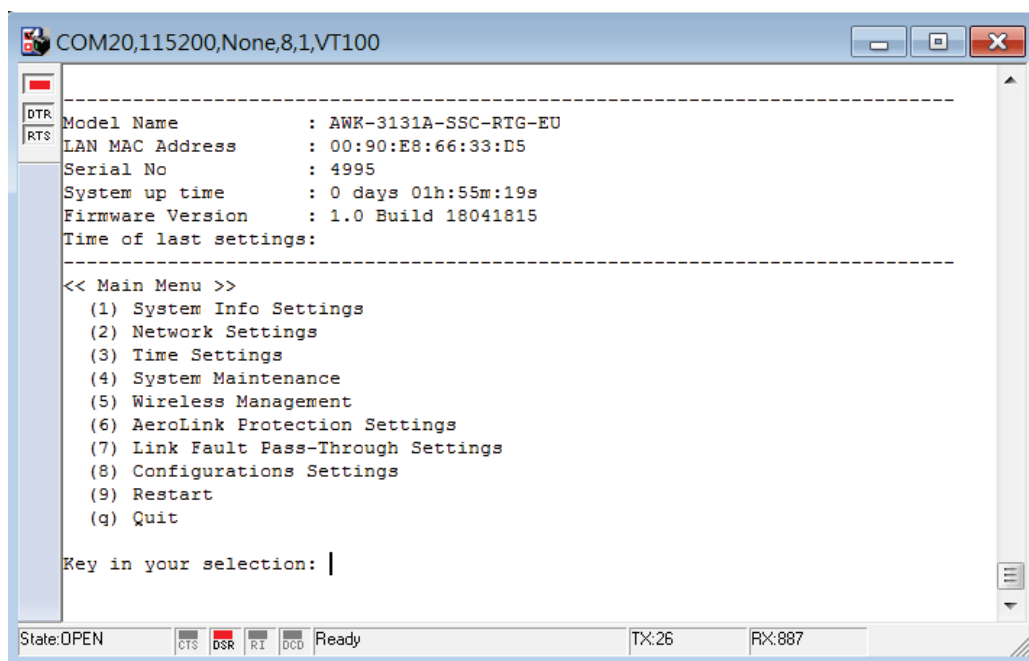



NOTE

To modify the appearance of the PComm Terminal Emulator window, select **Edit > Font** and then choose the desired formatting options.



ATTENTION

If you unplug the USB cable or trigger **DTR**, a disconnection event will be evoked to enforce logout for network security. You will need to log in again to resume operation.

Configuration via Telnet and SSH Consoles

You may use Telnet or SSH client to access the AWK-3131A-RTG and manage the console over a network. To access the AWK-3131A-RTG's functions over the network from a PC host that is connected to the same LAN as the AWK-3131A-RTG, you need to make sure that the PC host and the AWK-3131A-RTG are on the same logical subnet. To do this, check your PC host's IP address and subnet mask.




NOTE


The AWK-3131A-RTG's default IP address is **192.168.127.253** and the default subnet mask is **255.255.255.0** (for a Class C network). If you do not set these values properly, please check the network settings of your PC host and then change the IP address to 192.168.127.xxx and subnet mask to 255.255.255.0.

Follow the steps below to access the console utility via Telnet or SSH client.

1. From Windows Desktop, go to **Start > Run**, and then use Telnet to access the AWK-3131A-RTG's IP address from the Windows Run window (you may also issue the telnet command from the MS-DOS prompt).

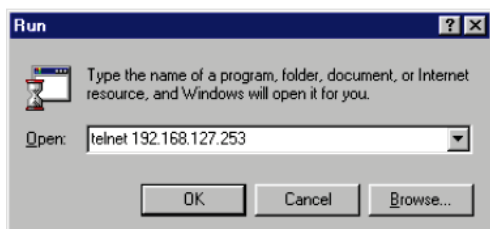



2. When using SSH client (ex. PuTTY), please run the client program (ex. putty.exe) and then input the AWK-3131A-RTG's IP address, specifying **22** for the SSH connection port.

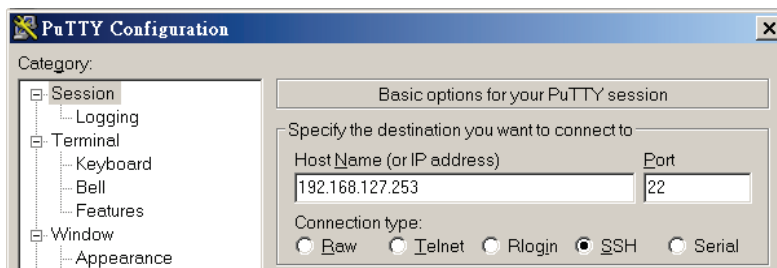

The console login screen is displayed. Refer to the *USB Console Configuration* section for login and administration information.

3. Log in into the command page (default username/password is cliadmin/moxa, if no new password is set).

AWK-3131A-RTG supports the CLI mode. You can use the TAB key to check a related CLI command.

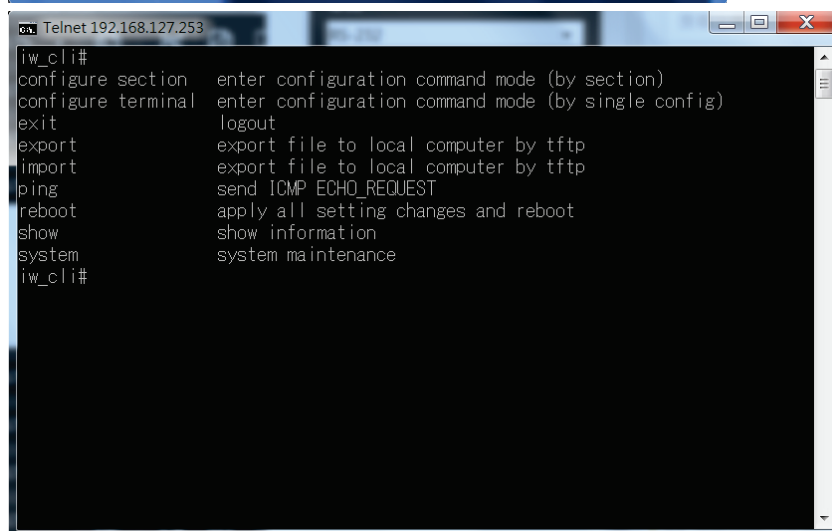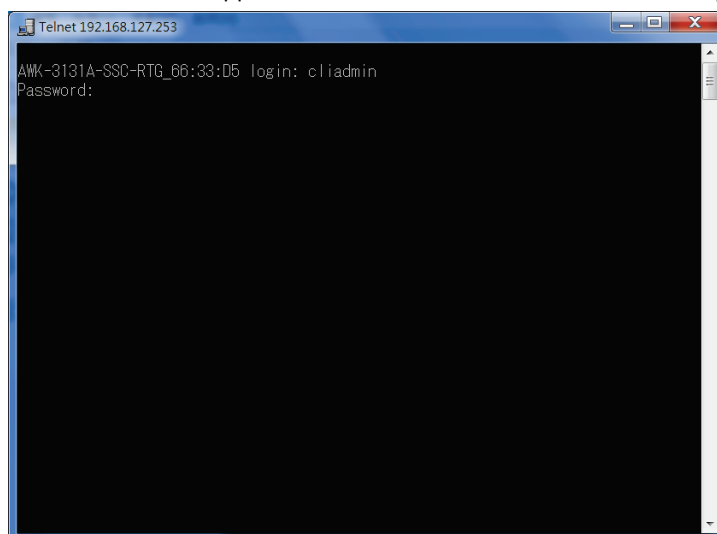

Configuration by Web Browser with HTTPS/SSL


To secure your HTTP access, the AWK-3131A-RTG supports HTTPS/SSL encryption for all HTTP traffic. Perform the following steps to access the AWK-3131A-RTG's web browser interface via HTTPS/SSL.

1. Open your web browser and type `https://<AWK-3131A-RTG's IP address>` in the address field. Press **Enter** to establish the connection.



2. Click on **continue to this website**.

The protocol in the URL changes to HTTPS. You can now enter your username and password to login into the function page.

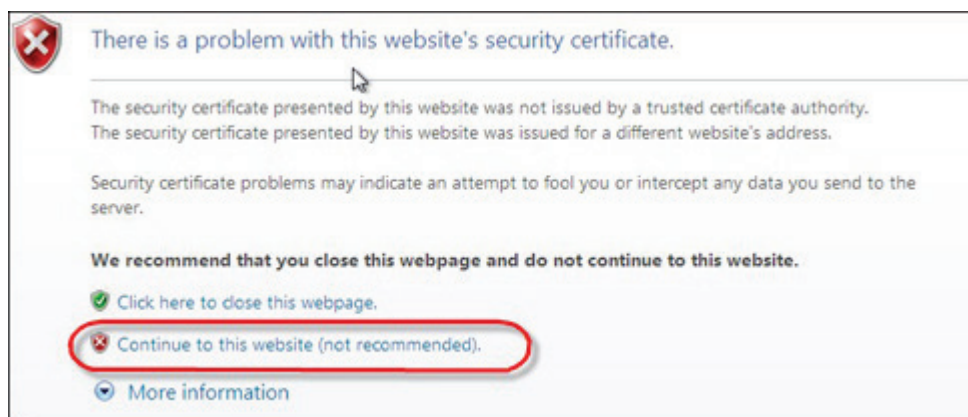

Disabling Telnet and Browser Access

If you are connecting the AWK-3131A-RTG to a public network but do not intend to use its management functions over the network, then we suggest disabling both Telnet Console and Web Configuration. Please run **Maintenance > Console Settings** to disable them, as shown in the following figure.

Console Settings	
HTTP console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
HTTPS console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Telnet console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SSH console	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
<input type="button" value="Submit"/>	

A. References

This chapter provides more detailed information about wireless-related technologies. The information in this chapter can help you manage your AWK-3131A-RTGs and plan your industrial wireless network better.

Beacon

A beacon is a packet broadcast by the AP to keep the network synchronized. A beacon includes the wireless LAN service area, the AP address, the Broadcast destination address, a time stamp, Delivery Traffic Indicator Maps (DTIM), and the Traffic Indicator Message (TIM). Beacon Interval indicates the frequency interval of AP.

DTIM

Delivery Traffic Indication Map (DTIM) is contained in beacon frames. It is used to indicate that broadcast and multicast frames buffered by the AP will be delivered shortly. Lower settings result in more efficient networking, while preventing your wireless client from dropping into power-saving sleep mode. Higher settings allow your PC to enter sleep mode, thus saving power.

Fragment

A lower setting means smaller packets, which will create more packets for each transmission. If you have decreased this value and experience high packet error rates, you can increase it again, but it will likely decrease overall network performance. Only minor modifications of this value are recommended.

RTS Threshold

RTS Threshold (256-2346) – This setting determines how large a packet can be before the Access Point coordinates transmission and reception to ensure efficient communication. This value should remain at its default setting of 2,346. When you encounter inconsistent data flow, only minor modifications are recommended.

STP and RSTP

The STP/RSTP Concept

Spanning Tree Protocol (STP) was designed to help reduce link failures in a network, and provide protection from loops. Networks that have a complicated architecture are prone to broadcast storms caused by unintended loops in the network. The STP protocol is part of the IEEE802.1D standard, 1998 Edition bridge specification.

Rapid Spanning Tree Protocol (RSTP) implements the Spanning Tree Algorithm and Protocol defined by IEEE802.1w-2001 standard. RSTP provides the following benefits:

- The topology of a bridged network will be determined much more quickly compared to STP.
- RSTP is backward compatible with STP, making it relatively easy to deploy. For example:
 - Defaults to sending 802.1D-style BPDUs if packets with this format are received.
 - STP (802.1D) and RSTP (802.1w) can operate on the LAN ports and WLAN ports of the same AWK-3131A-RTG.

This feature is particularly helpful when the AWK-3131A-RTG connects to older equipment, such as legacy switches.

Differences Between RSTP and STP

RSTP is similar to STP, but includes additional information in the BPDUs that allow each bridge to confirm that it has taken action to prevent loops from forming when it decides to enable a link to a neighboring bridge. Adjacent bridges connected via point-to-point links will be able to enable a link without waiting to ensure that all other bridges in the network have had time to react to the change. The main benefit of RSTP is that the configuration decision is made locally rather than network-wide, allowing RSTP to carry out automatic configuration and restore a link faster than STP.

B. Supporting Information

This chapter presents additional information about this product. You can also learn how to contact Moxa for technical support.

Firmware Recovery

When the LEDs of **FAULT**, **Signal Strength**, **CLIENT**, and **WLAN** all light up simultaneously and blink at one-second interval, it means the system booting has failed. It may result from some wrong operation or uncontrollable issues, such as an unexpected shutdown during firmware update. The Firmware Recovery mode is designed to help administrators recover such damage and resume system operation rapidly. You can refer to the following instructions to recover the firmware:

Connect to the AWK-3131A-RTG's RS-232 console with **115200bps and N-8-1**. You will see the following message shown on the terminal emulator every one second.

```
please set-up TFTP server 192.168.127.1 contains awk3131a-rtg.rom for firmware
recovery.
please set-up TFTP server 192.168.127.1 contains awk3131a-rtg.rom for firmware
recovery.
please set-up TFTP server 192.168.127.1 contains awk3131a-rtg.rom for firmware
recovery.
please set-up TFTP server 192.168.127.1 contains awk3131a-rtg.rom for firmware
recovery.
please set-up TFTP server 192.168.127.1 contains awk3131a-rtg.rom for firmware
recovery.
please set-up TFTP server 192.168.127.1 contains awk3131a-rtg.rom for firmware
recovery.
```

To initiate a firmware recovery process, do the following:

1. Change the IP address of the laptop to 192.168.127.1.
2. Set up a TFTP sever on your laptop.
3. Download the AWK-3131A-RTG's firmware from Moxa's Website.
4. Change the firmware file name to awk3131a-rtg.rom
5. Connect to the AWK-3131A-RTG's M12 Ethernet port or SC fiber port.

If the setting is correct, you will see the following message shown on the terminal emulator, and the AWK-3131A-RTG will reboot when the firmware recovery process has finished.

```
Trying eth0
Using eth0 device
TFTP from server 192.168.127.1; our IP address is 192.168.127.253
Filename 'awk3131a-rtg.rom'.
Load address: 0x80060000
Loading:
*#####
#####
#####
```

DoC (Declaration of Conformity)

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, (example – use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator & your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC 15.407(e): Within the 5.15-5.25 GHz band, U-NII devices will be restricted to indoor operations to reduce any potential for harmful interference to co-channel MSS operations.

Canada, Industry Canada (IC) Notices

This device complies with Industry Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Warning:

Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Canada, avis d'Industry Canada (IC)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Devraient également être informés les utilisateurs que les radars à haute puissance sont désignés comme utilisateurs principaux (c.-à-d. utilisateurs prioritaires) des bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient provoquer des interférences et / ou endommager les appareils LE-LAN.

Radio Frequency (RF) Exposure Information

The radiated output power of this wireless device is below the Industry Canada (IC) radio frequency exposure limits. This wireless device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has also been evaluated and shown compliant with the IC RF Exposure limits under mobile exposure conditions (i.e., the device antennas are greater than 20 cm from a person's body).

Informations concernant l'exposition aux fréquences radio (RF)

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Utilisez l'appareil de sans fil de façon à minimiser les contacts humains lors du fonctionnement normal.

Ce périphérique a également été évalué et démontré conforme aux limites d'exposition aux RF d'IC dans des conditions d'exposition à des appareils mobiles (antennes sont supérieures à 20 cm à partir du corps d'une personne).

Antenna Gain and RF Radiated Power

The following sections contain the FCC rules regarding adapting the product transmission power based on the antenna used.

Point-to-Multipoint

Antenna Part No.	Antenna Type	Maximum Antenna Gain*
ANT-WDB-ARM-2	Dipole	2 dBi for 2.4 GHz
ANT-WDB-ANM-0502	Dipole	5 dBi for 2.4 GHz

Point-to-Point

Antenna Part No.	Antenna Type	Maximum Antenna Gain*
ANT-WDB-PNF-1518	Directional panel	15 dBi for 2.4 GHz 18 dBi for 5 GHz

* The EIRP should not exceed the allowed value
 EIRP = transmitter power + antenna gain (dBi).
 Transmitter power: AWK's RF radiated power

AWK Power Setting Example

FCC 2.4 GHz BAND RULES (Point-to-Multipoint) Max EIRP = +36 dBm (4 watts)				
Maximum RF Output Power		Maximum Antenna Gain	Maximum EIRP	
dBm	(mW)	dBi	dBm	(mW)
26	(398)	10	36	(4000)
23	(199)	13		
20	(99.5)	16		
17	(49.75)	19		
14	(24.875)	22		
11	(12.4375)	25		
8	(6.21875)	28		
5	(3.109375)	31		

FCC 2.4 GHz BAND RULES (Point-to-Point) Max EIRP = Special Rules				
The FCC ruling states that for every 1 dBi the Intentional Radiator is reduced below the initial 30 dBm that the antenna gain may be increased from the initial 6 dBi by 3 dB				
Maximum RF Output Power		Maximum Antenna Gain	Maximum EIRP	
dBm	(mW)	dBi	dBm	(mW)

FCC 2.4 GHz BAND RULES (Point-to-Point)				
Max EIRP = Special Rules				
The FCC ruling states that for every 1 dBi the Intentional Radiator is reduced below the initial 30 dBm that the antenna gain may be increased from the initial 6 dBi by 3 dB				
26	(398)	18 (6+12)	44	(25000)
23	(199)	27 (6+21)	50	(100000)

FCC 5 GHz BAND RULES (Point-to-Multipoint)								
Max EIRP = special rules								
If antennas higher than 6 dBi gain are utilized, a reduction of 1 dB of the MAX RF output POWER is required for every 1 dBi increase in the antenna gain above 6 dBi								
Band	Frequency (GHz)	Channels	Location	Maximum RF Output Power		Maximum Antenna Gain	Maximum EIRP	
				dBm	(mW)	dBi	dBm	(mW)
UNII	5.15-5.25	36, 40, 44, 48	Indoor & Outdoor	26	(398)	9	35	(3162)
UNII-2	5.25-5.35	52, 56, 60, 64	Indoor & Outdoor	23	(200)	6	29	(800)
UNII-2 ext.	5.470-5.725	100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	Indoor & Outdoor	23	(200)	6	29	(800)
UNII-3	5.725-5.825	149, 153, 157, 161, 165	Outdoor	26	(398)	9	35	(3162)

FCC 5 GHz BAND RULES (Point-to-Point)								
Max EIRP = special rules								
For UNII-1: Fixed point to point transmitters that employ a directional antenna gain greater than 23 dBi, a 1 dB reduction in MAX RF output POWER is required for each 1 dB of antenna gain in excess of 23 dBi.								
For UNII-2: If antennas higher than 6 dBi gain are utilized, a reduction of 1 dB of the MAX RF output POWER is required for every 1 dBi increase in the antenna gain above 6 dBi								
For UNII-3: Fixed point to point UNII devices operating in this band may employ transmitting antennas with directional gain greater than 6 dBi without any corresponding reduction in transmitter conducted power.								
Band	Frequency (GHz)	Channels	Location	Maximum RF Output Power		Maximum Antenna Gain	Maximum EIRP	
				dBm	(mW)	dBi	dBm	(mW)
UNII	5.15-5.25	36, 40, 44, 48	Indoor	26	(398)	26	52	(158449)
UNII-2	5.25-5.35	52, 56, 60, 64	Indoor & Outdoor	23	(200)	6	29	(800)
UNII-2 ext.	5.470-5.725	100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140	Indoor & Outdoor	23	(200)	6	29	(800)
UNII-3	5.725-5.825	149, 153, 157, 161, 165	Outdoor	26	(398)	No Limit	No Limit	No Limit

RED Compliance Statement

Moxa declares that the apparatus AWK-3131A-RTG complies with the essential requirements and other relevant provisions of Directive 2014/53/Eu.

The 5150 to 5350 MHz frequency range is restricted to indoor use only. Outdoor operation in this range is strictly prohibited.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacturer must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Not Intended for Use

None.