

ICS-G7526A/G7528A/ G7826A/G7828A-T Series Quick Installation Guide

Version 1.2, April 2023

Technical Support Contact Information
www.moxa.com/support

MOXA®

© 2023 Moxa Inc. All rights reserved.

P/N: 1802075261014




Package Checklist

The Moxa ICS-G7526A/G7528A/G7826A/G7828A Series industrial rackmount switches are shipped with the following items. If any of these items are missing or damaged, please contact your customer service representative for assistance.


- ICS-G7526A/G7528A/G7826A/G7828A switch
- USB cable (Type A male to Type B male)
- Power cord
- 4 protective caps for unused ports
- 2 rackmount ears
- Quick installation guide (printed)
- Warranty card

Panel Layouts

ICS-G7526A/G7826A

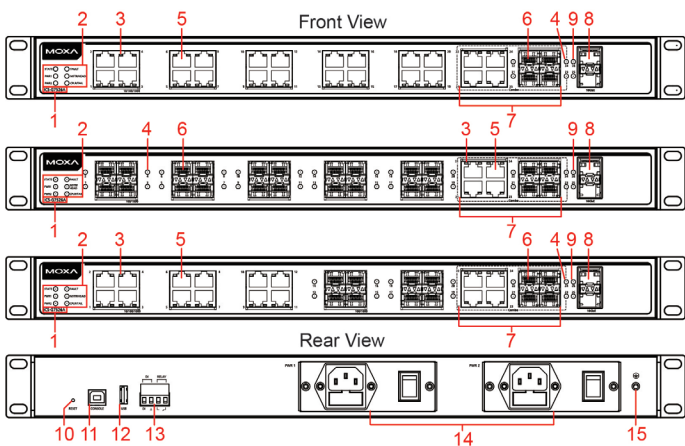


ICS-G7528A/G7828A

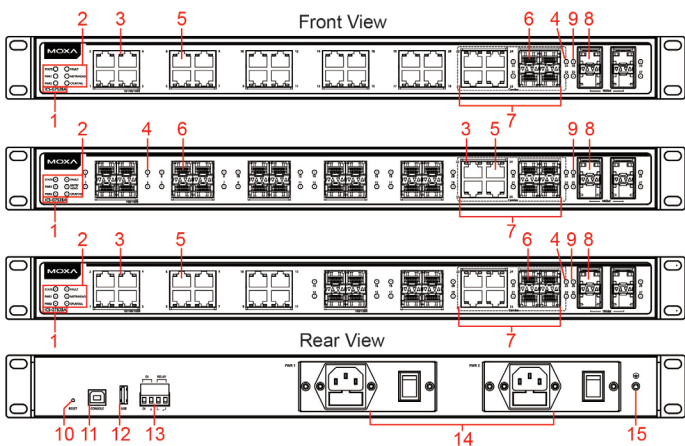

1. Model Name
2. System status LEDs
3. 10/100/1000 BaseT(X) port status LEDs
4. 100/1000 Base SFP port status LEDs
5. 10/100/1000 BaseT(X) port
6. 100/1000 Base SFP slot
7. 10/100/1000 BaseT(X) or 100/1000 Base SFP slot combo ports
8. 10 Gigabit Ethernet SFP+ slot
9. 10 Gigabit Ethernet SFP+ port status LEDs
10. Reset button
11. USB serial console port
12. USB storage port (ABC-02-USB)
13. Terminal block for Relay Output, Digital Input
14. AC power sockets for power inputs
15. Grounding screw

Dimensions

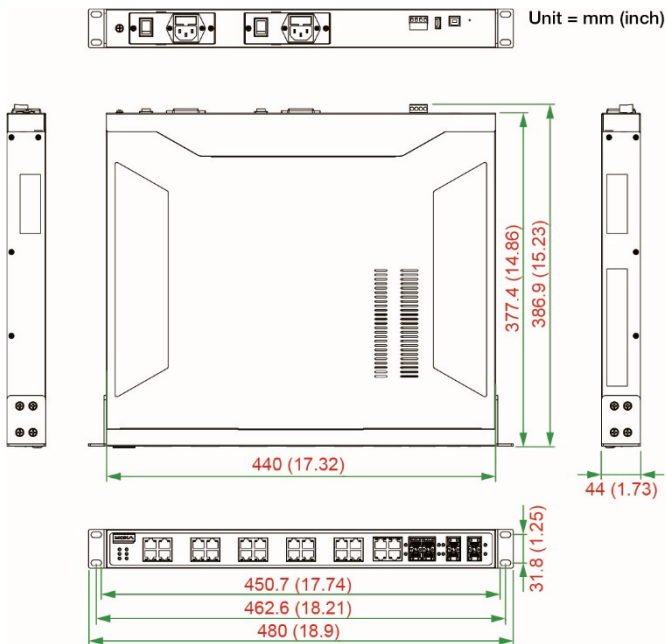


Grounding the Industrial Rackmount Switch

- Grounding and routing the wire to the protective conductor terminal (protective earth) helps limit the effects of noise due to electromagnetic interference (EMI).
- We suggest using the cable type-AWG (American Wire Gauge) 22 as minimum size.
- Insert the exposed grounding wire all the way into the hole of the grounding plug.
- Run the ground connection from the ground screw to the grounding surface prior to connecting devices.

Connecting the Power Inputs

The ICS-G7526A/G7528A/G7826A/G7828A switches support dual redundant power supplies: *Power Supply 1 (PWR1)* and *Power Supply 2 (PWR2)*. The connections for PWR1 and PWR2 are located on the rear side (shown below). Be sure to use a standard power cord with an IEC C13 connector, which is compatible with the AC power inlet.



Wiring the Relay Contact

Each ICS-G7526A/G7528A/G7826A/G7828A switch has one relay output.


FAULT:

The relay contact of the 4-pin terminal block connector is used to detect user-configured events. The two wires attached to the fault contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the fault circuit remains closed.

USB Console Connection

The ICS-G7526A/G7528A/G7826A/G7828A series has one USB console port (type B connector), located on the top panel. Use the USB cable (provided in the product package) to connect the ICS-G7526A/G7528A/G7826A/G7828A's console port to your PC's USB port and install the USB driver (available from Moxa's website) on the PC. You may then use a console terminal program, such as Moxa PComm Terminal Emulator, to access the ICS-G7526A/G7528A/G7826A/G7828A's console configuration utility.

USB Console Port (Type B Connector) Pinouts

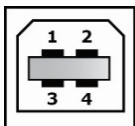


Pin	Description
1	D- (Data -)
2	VCC (+5V)
3	D+ (Data+)
4	GND (Ground)

USB Storage Connection

The ICS-G7526A/G7528A/G7826A/G7828A series has one USB storage port (type A connector) on the front panel. Use Moxa ABC-02-USB automatic backup configurator to connect the ICS-G7526A/G7528A/G7826A/G7828A's USB storage port for configuration backup, firmware upgrade or system log file backup.

USB Storage Port (Type A Connector) Pinouts



Pin	Description
1	VCC (+5V)
2	D- (Data -)
3	D+ (Data+)
4	GND (Ground)

NOTE DO NOT pull out USB Automatic Backup Configurator ABC-02-USB while writing or reading data.

The Reset Button

Depress the Reset button for five continuous seconds to load the factory default settings. Use a pointed object, such as a straightened paper clip or toothpick, to depress the Reset button. When you do so, the STATE LED will start to blink about once per second. Continue to depress the STATE LED until it begins blinking more rapidly; this indicates that the button has been depressed for five seconds and you can release the Reset button to load factory default settings.

NOTE DO NOT power off the switch when loading default settings.

LED Indicators

The front panel of the ICS-G7526A/G7528A/G7826A/G7828A switches contain several LED indicators. The function of each LED is described in the table below.

LED	Color	State	Description
System LEDs			
STATE	GREEN	On	The system passed the self-diagnosis test on boot-up and is ready to run.
		Blinking	<ol style="list-style-type: none"> 1. System is undergoing the self-diagnosis test. 2. Blinks continuously when pressing the reset button 5 seconds to reset to factory default. 3. Blinks slowly when an ABC-02 automatic backup device is detected.
	RED	On	The system failed self-diagnosis on boot-up.
PWR1	AMBER	On	Power is being supplied to the main module's power input PWR1.
		Off	Power is not being supplied to the main module's power input PWR1.
PWR2	AMBER	On	Power is being supplied to the main module's power input PWR2.
		Off	Power is not being supplied to the main module's power input PWR2.
FAULT	RED	On	The system has failed, or is under quick inspection.
		Off	The system is operating normally.
MSTR/ HEAD	GREEN	On	The switch is set as the Master of the Turbo Ring, or as the Head of the Turbo Chain.
		Blinking	The switch has become the Ring Master of the Turbo Ring, or the Head of the Turbo Chain, after the Turbo Ring or the Turbo Chain is down.
		Off	The switch is not the Master of this Turbo Ring or is set as a Member of the Turbo Chain

LED	Color	State	Description
CPLR/ TAIL	GREEN	On	The switch's coupling function is enabled to form a back-up path, or when it's set as the Tail of the Turbo Chain.
		Blinking	Turbo Chain is down
		Off	The switch disables the coupling function.
When the system is importing/exporting data from or to an ABC-02 automatic backup device, the FAULT, MSTR/HEAD, and CPLR/TAIL LEDs will blink in sequence.			

LED	Color	State	Description
Port Status LEDs			
10/100/ 1000M (TP ports)	GREEN	On	The corresponding port's link is active.
		Blinking	Data is being transmitted.
		Off	The corresponding port's link is inactive.
100/1000M (Fiber Optic ports)	GREEN	On	The corresponding port's link is active at 1000 Mbps.
		Blinking	Data is being transmitted at 1000 Mbps.
		Off	The corresponding port's link is inactive.
	AMBER	On	The corresponding port's link is active at 100 Mbps.
		Blinking	Data is being transmitted at 100 Mbps.
		Off	The corresponding port's link is inactive.
10GbE (Fiber Optic ports)	GREEN	On	The corresponding port's link is active.
		Blinking	Data is being transmitted.
		Off	The corresponding port's link is inactive.

Specifications

Technology	
Standards	IEEE 802.3 for 10BaseT IEEE 802.3u for 100BaseT(X) and 100BaseFX IEEE 802.3ab for 1000BaseT(X) IEEE 802.3z for 1000BaseSX/LX/LHX/ZX IEEE 802.3ae for 10 Gigabit Ethernet IEEE 802.3x for Flow Control IEEE 802.1D-2004 for Spanning Tree Protocol IEEE 802.1w for Rapid Spanning Tree Protocol IEEE 802.1s for Multiple Spanning Tree Protocol IEEE 802.1Q for VLAN Tagging IEEE 802.1p for Class of Service IEEE 802.1X for Authentication IEEE 802.3ad for Port Trunk with LACP
Protocols	IGMPv1/v2, GMRP, GVRP, SNMPv1/v2c/v3, DHCP Server/Client, BootP, TFTP, SNTP, SMTP, RARP, RMON, HTTP, HTTPS, Telnet, Syslog, DHCP Option 66/67/82, SSH, LLDP, IEEE 1588 PTP V2, EtherNet/IP, Modbus/TCP, PROFINET, SNMP Inform, NTP Server/Client, IPv6 (ICS-G7500A series)

Layer 3 Switching (ICS-G7800A)	Static routing, RIP V1/V2, OSPF, DVMRP, PIM-DM, PIM-SM, PIM-SSM
Layer 3 Switching Redundancy (ICS-G7800A)	VRRP
MIB	MIB-II, Ethernet-like MIB, P-BRIDGE MIB, Q-BRIDGE MIB, Bridge MIB, RSTP MIB, RMON MIB Groups 1, 2, 3, 9
Flow Control	IEEE 802.3x flow control, back pressure flow control
Interface	
Gigabit Ethernet	10/100/1000BaseT(X) or 100/1000BaseSFP slot
10 Gigabit Ethernet	10GbE SFP+ slot
Console Port	USB-serial console (Type B connector)
Storage Port	USB storage (Type A connector for ABC-02-USB)
LED Indicators	STATE, PWR1, PWR2, FAULT, MSTR/HEAD, CPLR/TAIL
Alarm Contact	1 relay output with current carrying capacity of 2 A @ 30 VDC
Digital Inputs	1 input with the same ground, but electrically isolated from the electronics. <ul style="list-style-type: none"> • +13 to +30V for state "1" • -30 to +1V for state "0" • Max. input current: 8 mA
Power Requirements	
Input Voltage	100 to 240 VAC
Operating Voltage	85 to 264 VAC
Input Current	Max. 1.08/0.7 A @ 110/220 VAC
Power Consumption	Max. 66.41 W @ 110 VAC Max. 67.96 W @ 220 VAC
Overload Current Protection	Present
Reverse Polarity Protection	Present
Physical Characteristics	
Housing	IP30 protection
Dimensions	440 x 44 x 386.9 mm (17.32 x 1.73 x 15.23 in)
Installation	19" rack mounting
Environmental Limits	
Operating Temp.	-40 to 75°C (-40 to 167°F)
Storage Temp.	-40 to 85°C (-40 to 185°F)
Ambient Relative Humidity.	5 to 95% (non-condensing)
Standards and Certifications	
Safety	UL 61010-2-201, EN 61010-2-201, UL 62368-1, IEC 62368-1
EMI	FCC Part 15 Subpart B Class A, EN 55032 Class A
EMS	EN 61000-4-2 (ESD) Level 3 EN 61000-4-3 (RS) Level 3 EN 61000-4-4 (EFT) Level 3 EN 61000-4-5 (Surge) Level 3 EN 61000-4-6 (CS) Level 3

	EN 61000-4-8 EN 61000-4-11
Rail Traffic	EN 50121-4
Shock	IEC 60068-2-27
Freefall	IEC 60068-2-32
Vibration	IEC 60068-2-6
Warranty	
Warranty Period	5 years
Details	See www.moxa.com/warranty

Rack Mounting Instructions

- 1. Elevated Operating Ambient:** If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
- 2. Reduced Air Flow:** Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
- 3. Mechanical Loading:** Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- 4. Circuit Overloading:** Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- 5. Reliable Earthing:** Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips).

Restricted Access Locations

- This equipment is intended to be used in Restricted Access Locations, such as a computer room, with access limited to SERVICE PERSONAL or USERS who have been instructed on how to handle the metal chassis of equipment that is so hot that special protection may be needed before touching it. The location should only be accessible with a key or through a security identity system.
- External metal parts of this equipment are extremely hot!! Before touching the equipment, you must take special precautions to protect your hands and body from serious injury.





ATTENTION

1. This device is only for indoor use and Pollution degree 2.
2. Conductors rated to withstand at least 105°C must be used for the Power Supply Terminal.
3. When wiring the relay contact and digital input, we suggest using the cable type-AWG (American Wire Gauge) 16-24 and the corresponding pin type cable terminals. The connector must be able to withstand torque at a maximum of 4.5 pound-inches. Use copper conductors only.
4. The equipment has a separate protective earthing terminal on the chassis that must be permanently connected to earth ground to adequately ground the chassis and protect the operator from electrical hazards. To avoid risks of electric shock, do not replace or remove the protective conductor.
5. The IP rating is not part of the safety certification.
6. This device must be installed within a suitable enclosure.
7. The cable that is connected to the field wiring terminals must be able to withstand at least 75°C.
8. Altitudes of up to 2000 m.
9. Transient overvoltage up to the levels of overvoltage category II.
10. Mains supply voltage fluctuations up to $\pm 10\%$ of the nominal voltage.
11. Temporary overvoltage occurring on the mains supply.
12. Clean the device with a soft dry or wet cloth.
13. For any repair or maintenance needs, please contact us.



WARNING

- Please employ an optional optical transceiver (SFP) that complies with IEC 60825-1, 21 CFR 1040 Section 1040.10 and 1040.11. It is classified as a Class 1 laser product.
- The safety of the installation to any system incorporating the equipment is the responsibility of the assembler of the system.
- The device is an open type piece of equipment and is intended to be installed in a suitable enclosure.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. The manufacturer is not responsible for any accident caused by the scenario mentioned above.

Shock hazard



CAUTION

TO DISCONNECT POWER, REMOVE ALL POWER CORDS FROM UNIT.





ATTENTION

DÉBRANCHER LES TOUT CORDONS
D'ALIMENTATION POUR DÉCONNECTER L'UNITÉ DU
SECTEUR

